

ALVAIR

40CM REMOTE CONTROL

PEDESTAL FAN

ACS215



- PLEASE READ THIS MANUAL CAREFULLY BEFORE USE AND ALWAYS OPERATE THIS PRODUCT ACCORDING TO THE INSTRUCTIONS.
- RETAIN THIS MANUAL FOR FUTURE REFERENCE.
- IT IS ILLEGAL AND DANGEROUS TO CHANGE OR MODIFY ANY PART OF THIS APPLIANCE.

Manufactured for
and distributed by:

ALVAIR

A division of Stingray Accessory Manufacturers (Pty) Ltd | P.O. Box 30014, Tokai, 7966
+27 21 442 1540 | customercare@stingray.co.za | www.alva.co.za
TOLL FREE NUMBER: 086 100 AL VA (2582)

IMPORTANT SAFETY INFORMATION

- Please read these instructions carefully before using your Pedestal Fan. The operator must understand all safety requirements as detailed in this manual before using the unit.
- The manufacturer's warranty may be voided by incorrect use of this product. If you have any queries regarding these instructions, contact your local dealer for clarification before using your Pedestal Fan.
- Always remove unit from all packaging materials prior to use.
- Failure to follow the manual's instructions could result in damage or serious injury.
- When using electrical appliances, in order to reduce the risk of fire, electric shock, and/or injury, these basic safety precautions should always be followed.
- This fan is intended for general domestic use to cool rooms and is not intended for use in windows.
- Do not use the fan for any other purpose.
- Keep the fan out of the reach of children and pets. This fan is not intended for use by children.
- Do not leave the fan unattended while it is in use, especially when children are present. Always unplug the fan from the electrical outlet when it is not in use.
- Always operate the fan on a flat, level, steady and stable surface to avoid it overturning.
- Do not hang or wall-mount the product.
- Do not place the fan in or near an open window. Rain, snow, and other weather elements may create an electrical hazard.
- Keep the power cord and fan away from sharp edges and heated surfaces.
- Always unplug the fan from the electrical outlet when cleaning it.

Thank you for your purchase of this Pedestal Fan. Please read these instructions carefully before use and keep them in a safe place, for future reference.



 
WARNING:
TO AVOID THE RISK OF ELECTRICAL SHOCK, ALWAYS MAKE SURE THE PRODUCT IS UNPLUGGED FROM THE ELECTRICAL OUTLET BEFORE ASSEMBLING, DISASSEMBLING, RELOCATING, SERVICING, OR CLEANING.

For indoor use only.



Assembly required

- Do not plug/unplug the fan into/from the electrical outlet with a wet hand. Never insert fingers or any other object through the fan guards. Never drop or insert objects into any opening of the fan.
- Do not attempt to open any part of the motor housing, as a risk of electrical shock may exist.
- Never operate the fan without the fan guards in place, as serious personal injury may result. Plug the fan into a standard outlet.
- Do not allow the power cord to hang (i.e., over the edge of a table or counter) where it may be tripped over or pulled.
- Do not operate fan if the power cord is cut, damaged, or if the wires are exposed. Contact 086 100 ALVA (2582) or an Authorised Service agent to replace the power cord.
- Do not immerse or expose the motor housing, power cord, or plug into water or other liquids. Disconnect the plug (do not pull on the power cord) from the electrical outlet.
- Do not put any stress on the power cord where it connects to the fan, as the power cord could fray and break.
- Do not operate the fan if it has a damaged power cord or plug, malfunctions, is dropped, or damaged. This fan has no user-serviceable parts.
- Do not attempt to examine or repair this fan yourself. Qualified service personnel should perform any servicing. This fan is intended for indoor, non-commercial, non-industrial, household use only.
- Do not use outdoors. This appliance is not intended for use by persons(including children) with reduced physical,sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

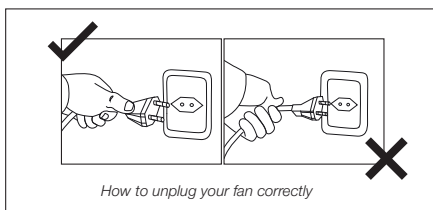

How to unplug your fan correctly

To remove from the socket pull on the plug, not the electrical cord

WARRANTY

PLEASE RETAIN YOUR PROOF OF PURCHASE FOR WARRANTY CLAIMS.

ALVA warrants this appliance to be free of defects in material and quality for a period of 12 months from date of original purchase. This warranty covers the intended use of this appliance – within a domestic setting and not for commercial or industrial purposes. Any damage caused by willful abuse, tampering, modification or unauthorized repair will not be warranted.

Please retain all packaging material, as items returned without original packaging material may be subject to a withholding fee. Where this appliance is found to be defective, damaged, broken, or does not work correctly for the intended purpose, you must return the appliance to the retailer from where it was purchased.

The warranty will only be effected with valid proof of purchase. Failure to provide the proof of purchase will most likely result in the repair or service required being chargeable.

If you have any questions while setting up or using this Pedestal Fan, please visit www.alva.co.za or call 086 100 ALVA (2582) or e-mail: customercare@stingray.co.za

GENERAL INFORMATION

Before using this Pedestal Fan, please read through this manual and make sure you understand everything. If you are not sure, call **086 100 ALVA (2582)** or visit www.alva.co.za for help.

Reading and understanding this manual should give you a good indication of what to expect from your Pedestal Fan.

Always keep your proof of purchase. Keep these instructions for future use.

If you lose this copy, you can obtain a new copy from your dealer or online at www.alva.co.za.

INDEX

PARTS LIST	2
ASSEMBLING THE FAN	3-4
OPERATION:	4
-CONTROL PANEL	5
-TILT FUNCTION	5
-HEIGHT ADJUSTMENT	6
-REMOTE CONTROL	6
CLEANING AND MAINTENANCE	7
DISPOSAL	7
TROUBLESHOOTING	8
SPECIFICATIONS	8
AFTER SALES SERVICE	8

KEY

Notes marked with the following;



 
Contain important information.

Notes marked with the following;



Contain cautions and warnings.

PARTS LIST

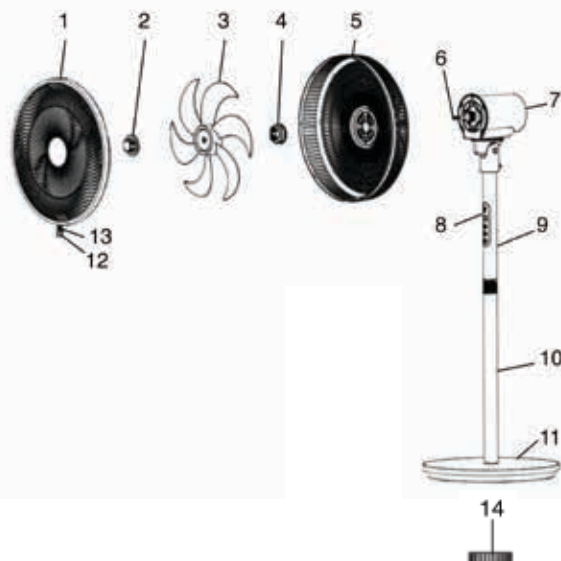

1.	Front grille
2.	Blade nut
3.	Blade
4.	Grille nut
5.	Back grille
6.	Motor Shaft
7.	Fan Body

8.	Control panel
9.	Upper stand pole
10.	Lower stand pole
11.	Base
12.	Grille buckle
13.	Safety screw
14.	Base nut

ASSEMBLING THE FAN

NOTE: Before using the appliance for the first time, thoroughly clean the appliance and accessories and let them dry completely. See chapter "Cleaning and maintenance".

The appliance must be fully assembled before first use and operation. Grilles and blades must be mounted correctly before the operation. Check that the appliance is not damaged before each use. Do not use incomplete or damaged fan.



1. Attach the lower stand pole to the base, then use the base nut to secure the base and lower stand pole together.




2. Attach the fan body and upper stand pole into the lower stand pole, and tighten the poles to secure them together.



3. Remove the grille nut from the fan body. Fit the back grille in the correct position on the fan body so that the 3 studs in the fan body align with the 3 holes in the back grille. Place the grille nut over the motor shaft and onto the thread of the fan body and tighten to secure it in its place (do not over-tighten).



4. Remove and discard the black protective plastic sleeve from the motor shaft. Push the fan blade onto the motor shaft, making sure to align the “D”-shaped hole in the fan blade with the “D”-shaped motor shaft. When fitted correctly, the metal motor shaft will protrude from the fan blade hole, allowing you to fit the blade nut. Tighten the nut anticlockwise as shown by the yellow sticker on the nut (this is opposite to the normal screw direction - do not over tighten).

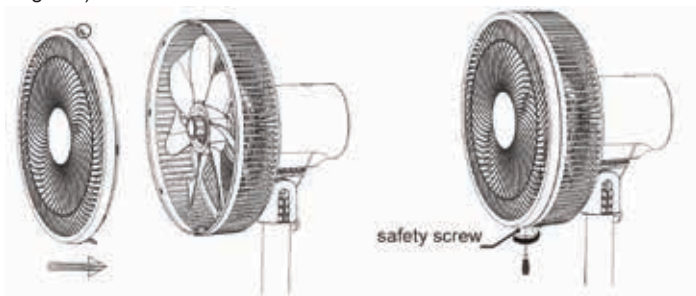

5. Mount the front grille onto the back grille by inserting the clip of the front grille into the slot at the top of the back grille, and then hinging it down until the front grille fully aligns and clips onto the back grille. Now secure with the grille buckle and its safety screw.

OPERATION


Make sure you have read and fully understood the safety instructions before operating the pedestal fan.

- Choose a safe, horizontal, stable surface to place your fan and position the power cord so not to create a trip hazard.
- Plug the power cord into a suitable power socket.



Please read these instructions carefully before use and keep them in a safe place for future reference.

CONTROL PANEL

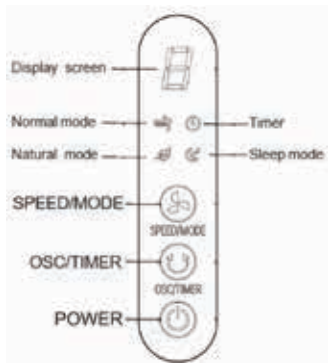

 **POWER** - press this key to switch on the fan. The fan will start in normal air flow mode on LOW speed, the display will show '1' to indicate this setting.

 **SPEED/ MODE** - press this key to change the air flow speed.
There are 3 speeds to select.

1-Low

2-Medium

3-High

To change the mode - press and hold this key for 3 seconds.

There are 3 modes that can be set:

- Normal mode: This allows constant air speed
- Natural mode: The speed of the fan will constantly vary between the speed set and zero to simulate an outdoor environment.
- Sleep mode: This is the same as normal mode, but the LED display and the beep sound will be turned off.

 **OSCILLATION/TIMER** - Press this key to activate the side-to-side oscillation of the fan head. To deactivate setting, press this button again.

To activate the timer function, press and hold the clock icon for 3 seconds. The timer can be setup to 9hrs. Short press the key to select the desired length of time (1,2,3 - 9hr)


TILT FUNCTION

The head of the fan can be adjusted to direct the air flow up or down. Loosen the tilt by adjusting the screw on the side of the housing, position the head, at the desired angle and re-tighten the screw after adjusting the head of the fan.


HEIGHT ADJUSTMENT

The height of the fan can be set at 1200mm or 700mm.

- For maximum height of 1200mm assemble as detailed in steps 1 and 2 on page 3.
- For fan height of 700mm, remove the lower stand pole from the base and attach only the upper stand pole and body into the base and secure to the base with the base nut.

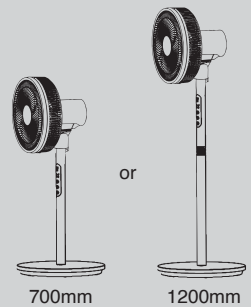

REMOTE CONTROL

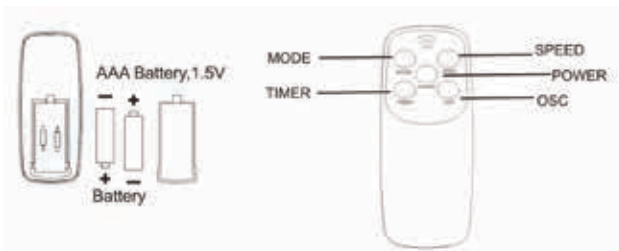

- Only use 'AAA' 1.5V batteries in this remote control.
- Be sure to insert the batteries correctly, taking care to observe the correct polarity (+ and -).
- Do not mix old and new batteries when inserting them into the remote control.
- Batteries are not included.

No batteries supplied.



*Replacement
Battery
AAA*

CLEANING AND MAINTENANCE

- **WARNING!** The appliance must be cleaned regularly. Failure to maintain the appliance in a clean condition may result in deterioration of the surface which could compromise the lifespan of the appliance and cause dangerous situations.
- Switch off the appliance, unplug it and let it cool down before carrying out any maintenance or cleaning.
- Clean the appliance with a soft, damp cloth and, if necessary, a little mild detergent. To finish off, wipe it with a soft, dry cloth.
- If necessary, use a brush to clean parts and components that are not easily accessible.
- Do not clean the appliance with steel wool, strong chemicals, alkalis or abrasive agents, as they may damage the surface of the appliance.
- Do not immerse the appliance in water or other liquids.
- When cleaning, do not put your bare hands near any sharp elements that may cause cuts and always use protective gloves.
- The appliance may only be used again after it has dried completely.



Always switch off fan and remove plug from the wall socket before any cleaning or maintenance.

DISPOSAL

Used electric household devices

1. If you do not want to use your electrical appliance any longer, dispose of it at a recycling depot for used electric appliances.
2. Used electric devices must not be disposed of with normal household rubbish.

Further disposal instructions:

1. Return the electrical appliance in such a condition that its later re-use or recycling is not adversely affected.
2. Batteries must be removed in advance and the destruction of parts which contain fluids must be avoided.
3. Electrical appliances can contain harmful substances. Improper handling or damage to the appliance can lead to health problems or water or ground contamination, when the appliance is recycled later.

TROUBLE SHOOTING

If the fan does not turn on	Ensure that the remote is operational (check batteries).
	Try switching on the fan using the touch controls.
	Ensure that the wall socket is switched on and the fan is plugged in properly.

SPECIFICATIONS

Model	ACS215
Description	40CM Pedestal Fan
Voltage	220-240V ~ 50-60Hz
Input Power	45W
Any modifications to the fan may cause injury or property damage.	
Any modifications to the fan will invalidate the warranty on this appliance	

AFTER SALES SERVICE

MANUFACTURED FOR AND DISTRIBUTED BY:
 Alva Air, a division of Stingray Accessory Manufacturers
 (Pty) Ltd.
 P.O. Box 30014
 Tokai, 7966
 Tel: 021 442 1540
 E- mail: customercare@stingray.co.za
www.alva.co.za
 www.facebook.com/AlvaGas
 TOLL FREE NUMBER
086 100 ALVA (2582)

Should you experience problems with this Fan, carry out the necessary checks as per the Trouble Shooting guide

If you are still unable to correct the problem with the information in this guide, contact your nearest dealer or ALVA: 086 100 (ALVA) (2582) or e-mail customercare@stingray.co.za