

ALVA_{AIR}

30cm RECHARGEABLE PEDESTAL FAN

ACS401



- PLEASE READ THIS MANUAL CAREFULLY BEFORE USE AND ALWAYS OPERATE THIS PRODUCT ACCORDING TO THE INSTRUCTIONS.
- RETAIN THIS MANUAL FOR FUTURE REFERENCE.
- IT IS ILLEGAL AND DANGEROUS TO CHANGE OR MODIFY ANY PART OF THIS APPLIANCE.

Manufactured for
and distributed by:

ALVA_{AIR}

A division of Stingray Accessory Manufacturers (Pty) Ltd | P.O. Box 30014, Tokai, 7966
+27 21 442 1540 | info@stingray.co.za | www.alva.co.za
TOLL FREE NUMBER: 086 100 ALVA (2582)

IMPORTANT SAFETY INFORMATION

- Please read these instructions carefully before using your Rechargeable Pedestal Fan. The operator must understand all safety requirements as detailed in this manual before using the unit.
- The manufacturer's warranty may be voided by incorrect use of this product. If you have any queries regarding these instructions, contact your local dealer for clarification before using your Rechargeable Pedestal Fan.
- Always remove unit from all packaging materials prior to use.
- Failure to follow the manual's instructions could result in damage or serious injury.
- When using electrical appliances, in order to reduce the risk of fire, electric shock, and/or injury, these basic safety precautions should always be followed.
- This product is intended for general domestic use in cooling rooms and is not intended for use in windows.
- Do not use the product for any other purpose.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- Do not leave the product unattended while it is in use, especially when children are present. Always unplug the product from the electrical outlet when it is not in use.
- Always operate the product on a flat, level, stable surface to avoid it overturning.
- Do not hang or wall-mount the product.
- Do not place the product in or near an open window. Rain, snow, and other weather elements may create an electrical hazard.
- Do not use this fan in damp environments e.g. bathrooms etc.
- Do not expose the fan to high temperatures or direct sunlight, as it may affect the battery lifespan and the fan's performance.
- Keep the power cord and product away from sharp edges and heated surfaces.
- Always unplug the product from the electrical outlet when cleaning it.

Thank you for your purchase of this Rechargeable Pedestal Fan. Please read these instructions carefully before use and keep them in a safe place, for future reference.



 
WARNING:
TO AVOID THE RISK OF ELECTRICAL SHOCK, ALWAYS MAKE SURE THE PRODUCT IS UNPLUGGED FROM THE ELECTRICAL OUTLET BEFORE ASSEMBLING, DISASSEMBLING, RELOCATING, SERVICING, OR CLEANING.

For indoor use only.



Assembly required.

- Do not plug/unplug the product into/from the electrical outlet with a wet hand.
- Never insert fingers or any other object through the fan guards.
- Never drop or insert objects into any opening of the product.
- Do not attempt to open any part of the motor housing, as a risk of electrical shock may exist.
- Never operate the product without the fan guards in place, as serious personal injury may result. Plug the product into a standard outlet.
- Do not allow the charging unit power cord to hang (i.e., over the edge of a table or counter) where it may be tripped over or pulled.
- Do not operate product if the power cord is cut, damaged, or if the wires are exposed. Contact 086 100 ALVA (2582) or an Authorised Service agent to replace the charging unit power cord.
- Do not immerse or expose the motor housing, charging unit power cord, or charging unit to water or other liquids. Disconnect the charging unit (do not pull on the power cord) from the electrical outlet.
- Do not put any stress on the power cord where it connects to the product, as the power cord could disconnect from fan, fray or break.
- Do not operate the product if it has a damaged power cord or charging unit, malfunctions, is dropped, or damaged. This product has no user-serviceable parts.
- Do not attempt to examine or repair this product yourself. Qualified service personnel should perform any servicing. This product is intended for indoor, non-commercial, non-industrial, household use only.
- Do not use outdoors.

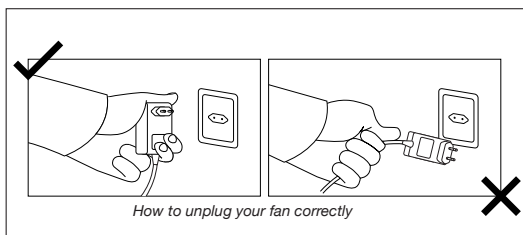

How to unplug your fan correctly

To remove from the socket pull on the charging unit, not the electrical cord

WARRANTY

PLEASE RETAIN YOUR PROOF OF PURCHASE FOR WARRANTY CLAIMS.

ALVA warrants this appliance to be free of defects in material and quality for a period of 12 months from date of original purchase. This warranty covers the intended use of this appliance – within a domestic setting and not for commercial or industrial purposes. Any damage caused by willful abuse, tampering, modification or unauthorized repair will not be warranted.

Please retain all packaging material, as items returned without original packaging material may be subject to a withholding fee. Where this appliance is found to be defective, damaged, broken, or does not work correctly for the intended purpose, you must return the appliance to the retailer from where it was purchased.

The warranty will only be effected with valid proof of purchase. Failure to provide the proof of purchase will most likely result in the repair or service required being chargeable.

If you have any questions while setting up or using this Rechargeable Pedestal Fan, please visit www.alva.co.za or call 086 100 ALVA (2582) or e-mail info@stingray.co.za

GENERAL INFORMATION

Before using this Rechargeable Pedestal Fan, please read through this manual and make sure you understand everything. If you are not sure, call **086 100 ALVA (2582)** or visit www.alva.co.za for help.

Reading and understanding this manual should give you a good indication of what to expect from your Rechargeable Pedestal Fan.

Always keep your proof of purchase. Keep these instructions for future use.

If you lose this copy, you can obtain a new copy from your dealer or online at www.alva.co.za.

INDEX

PARTS LIST	2
ASSEMBLING THE PEDESTAL FAN	3
OPERATING THE PEDESTAL FAN	3
SPEED FUNCTION	3
OCSILLATION FUNCTION	4
TILT FUNCTION	4
CLEANING AND MAINTENANCE	5
DISPOSAL	5
TROUBLE SHOOTING	6
SPECIFICATIONS	6
AFTER SALES SERVICE	6

KEY

Notes marked with the following;



Contain important information.

Notes marked with the following;




Contain cautions and warnings.

PARTS LIST

1.	Front Guard
2.	Fan Blade
3.	Rear Guard
4.	Plastic Nut
5.	Fan Blade Nut
6.	Screw
7.	Motor Shaft
8.	Fan Motor
9.	Locking Screw
10.	Upper Stand Tube
11.	Locking Screw
12.	Lower Stand Tube

13.	Base
14.	Washer
15.	Locking Screw
16.	Charging Unit
17.	Charger Plug in Fan

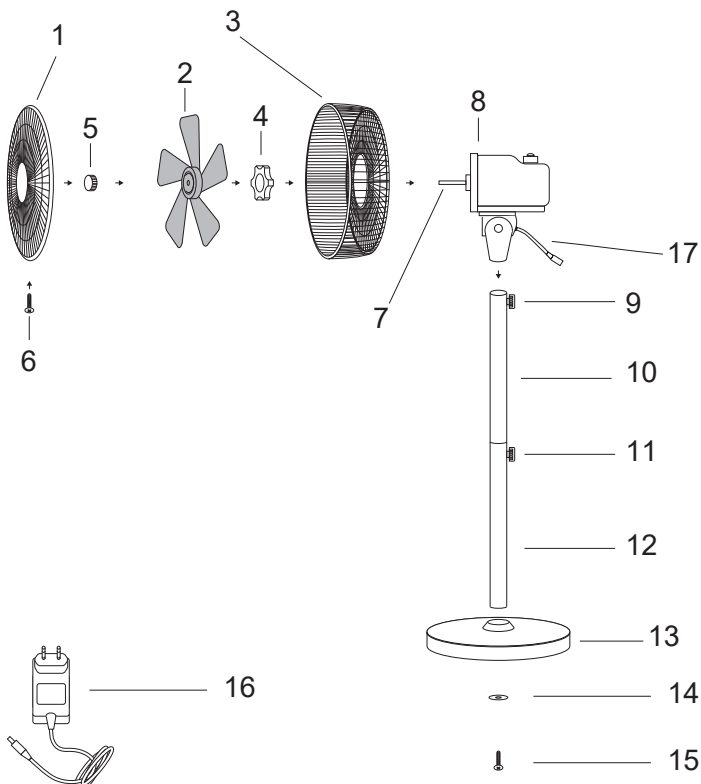 

ASSEMBLING THE FAN

1. Remove all the appliance components from the packaging.
2. Place the Lower Stand Tube (12) into the Base (13). Secure firmly with Washer (14) and Locking Screw(15).
3. Slide upper Stand Tube (10) into Lower Stand Tube (12) and secure with Locking Screw (11).
4. Position Fan Motor (8) into Upper Stand Tube (10) ensuring the holes in the Upper Stand Tube (10) and Fan Motor align. Secure with Locking Screw (9).
5. Position Rear Guard onto the Fan Motor (8) ensuring the 3 x plastic studs protrude through the slots in the rear guard, see Fig 1. Secure in place with the Plastic Nut (4), ensuring it is tightly fastened.
6. Slide Fan Blade (2) onto Motor Shaft (7). Secure in place with Blade Lock Nut (4). This is a left hand thread to ensure the nut does not come loose during operation.
7. Attach Front Guard (1) onto Rear Guard (3), aligning marks on top of Fan Guards. Rotate clockwise to lock, see Fig 2.
8. Fasten with screw through holes in bottom of fan guard assembly, see Fig 3.

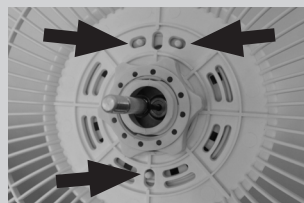 


Fig 1.

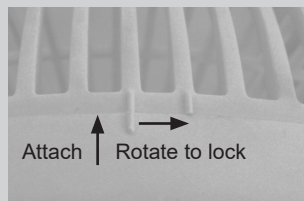 


Fig 2.

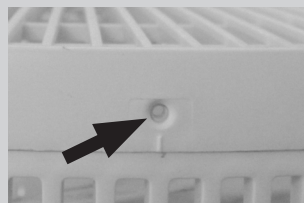 


Fig 3.

OPERATING THE FAN

This Rechargeable Pedestal Fan is for domestic use, it is not intended for industrial or commercial use, Your Pedestal Fan is safe and easy to use.

Place the fan on a flat, level surface and ensure it is stable.

Charge before first use.

Plug the charging unit (16) into the wall socket and connect the power lead into the Plug (17) on the rear of the fan motor.

After about 4-5 hours the lithium battery will be fully charged.

Unplug the fan from the charger and place the fan in the room.

Remove the charger unit from the wall socket.

The fan has a 4400mAh built-in lithium battery, with a run time of between 3-9 hours depending on fan speed setting.

• Speed Function (Fig 4.)

This Pedestal Fan has 3 speeds for your comfort and convenience.

- 1 - Low speed.
- 2 - Mid speed.
- 3 - High speed.
- 0 - Off.



*When Charging Unit (16) has **red** indicator light on, the fan is charging.*

*When **green** indicator light is on, the fan is fully charged.*

Speed Control
Knob

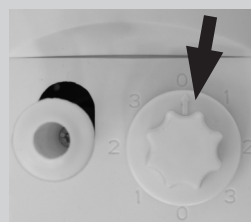 


Fig 4.

- **Oscillation Function**

The Pedestal Fan has an oscillating function (side to side swing) for comfort and convenience.

To activate this function, depress the Oscillation Knob (Fig 5.) and the head will automatically oscillate from left to right and back again when the fan is switched on.

Lift the Oscillation Knob to stop this function and keep the air flow in one direction only.

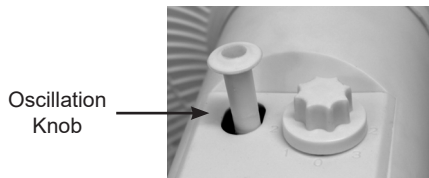 


Fig 5.

- **Tilt Adjustment**

While the fan is switched off, loosen the motor tilt nut and tilt the head to the desired angle.

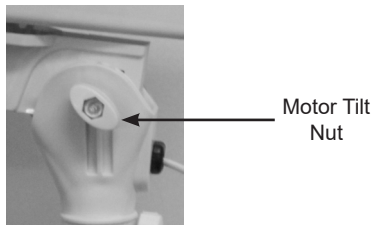 


Fig 6.

Lock the motor tilt nut to maintain the angle before switching the fan on.

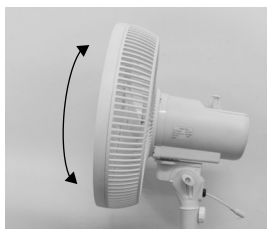 


Fig 7.

CLEANING AND MAINTENANCE

- The appliance, the power cord and the charging unit must not be immersed in water or other liquids when you are cleaning them. Clean them with a dry cloth.
- If it is very dirty, the outside of the appliance can be wiped carefully with a moist cloth and then dried carefully. Make sure that no moisture penetrates into the interior of the appliance.
- Do not use any harsh cleaners, steel brushes, scouring powder or other hard objects to clean the appliance as these can cause scratches on the surfaces.
- Clean the appliance regularly.
- Never use solvents, benzene or oil-based cleaners as these can damage the housing.
- Re-tighten visible screw connections on the appliance regularly in order to ensure that the device is functioning properly.



Before cleaning the fan always remove the charging unit from the power socket to prevent injury or electrical shock. Also ensure the charging unit is not plugged into the fan.

DISPOSAL

Used electric household devices

1. If you do not want to use your electrical appliance any longer, dispose of it at a recycling depot for used electric appliances.
2. Used electric devices must not be disposed of with normal household rubbish.



Further disposal instructions:

1. Return the electrical appliance in such a condition that its later re-use or recycling is not adversely affected.
2. Batteries must be removed in advance and the destruction of parts which contain fluids must be avoided.
3. Electrical appliances can contain harmful substances. Improper handling or damage to the appliance can lead to health problems or water or ground contamination, when the appliance is recycled later.

TROUBLE SHOOTING

If the pedestal fan will not operate	Charge battery with supplied charging unit.
	Confirm the pedestal stand fan switch is not in the off position.
	Make sure the electricity supply to the wall socket is working.

SPECIFICATIONS

Model	ACS401
Description	30cm Rechargeable Pedestal Fan
Voltage	AC100-240 / DC12V
Power	15W
Battery Type	Built-in Lithium 4400mAh
Fan Runtime Per Charge	3-9 Hours
Battery Charging Time	4-5 Hours
Any modification to the Pedestal Fan may cause injury or property damage.	
Any modification to the Pedestal Fan will invalidate the warranty of this appliance.	

AFTER SALES SERVICE

MANUFACTURED FOR AND DISTRIBUTED BY
 Alva Air, a division of Stingray Accessory Manufacturers
 (Pty) Ltd.
 P.O. Box 30014
 Tokai, 7966
 Tel: 021 442 1540
 E-mail: info@stingray.co.za
www.alva.co.za
 www.facebook.com/AlvaGas
 TOLL FREE NUMBER
086 100 ALVA (2582)



Should you experience problems with this Rechargeable Pedestal Fan, carry out the necessary checks as per the Trouble Shooting Guide.

If you are still unable to correct the problem with the information in this guide, contact your nearest dealer or ALVA: 086 100 (ALVA) (2582) or e-mail info@stingray.co.za