

ATACAMA DUAL 3 BURNER BBQ/GRILL



Your world is better with Alva

- THIS IS A LOW PRESSURE APPLIANCE TO BE USED. ONLY WITH A 2.8kPa SANS 1237 REGULATOR AND EN16436 HOSE (REGULATOR AND HOSE SUPPLIED)
- FOR YOUR OWN SAFETY, PLEASE READ THIS MANUAL CAREFULLY AND ALWAYS OPERATE THIS PRODUCT ACCORDING TO THE INSTRUCTIONS
- IT IS ILLEGAL AND DANGEROUS TO CHANGE OR MODIFY ANY PART OF THIS APPLIANCE



APPROVED FOR USE IN SOUTH AFRICA

A division of Stingray Accessory Manufacturers (Pty) Ltd 5 Beach Road, Woodstock, Cape Town, 7925 P.O. Box 30014, Tokai, 7966 +27 21 442 1540 | info@stingray.co.za | www.alva.co.za | TOLL-FREE NUMBER: 086 100 ALVA (2582)





IMPORTANT SAFETY INFORMATION

- The operator is responsible for the safety of all third parties while the appliance is in use.
- The manufacturer's warranty will be voided by incorrect use of this product.
- If you have any queries regarding these instructions, contact your local dealer for clarification before you use your Gas BBQ.
- The unit must be correctly installed before use.
- DO NOT use indoors. The Gas BBQ is designed for OUTDOOR USE ONLY.
- · Use only in a weather protected area, under shelter.
- Ensure that the Gas BBQ is positioned on an even and secure surface before operating.
- · Ensure all gas fittings are correctly and firmly fitted before use.
- · Leak test all gas lines and connections before use.
- DO NOT store flammable materials near the Gas BBQ.
- DO NOT place or use aerosol sprays near the Gas BBQ.
- Use only with LPG gas.
- DO NOT leave the Gas BBQ unattended when it is alight.
- Keep children and animals away while the Gas BBQ is in use.
- Parts of the Gas BBQ will get extremely hot and could cause serious burns - test every surface before touching it.
- Be very careful when operating the Gas BBQ. The operator should pay constant attention to the food being cooked and should remain at the appliance at all times when it is lit.
- Ensure that the gas supply is turned OFF after use and while the Gas BBQ is unattended.
- Modifying or tampering with any part of this Gas BBQ is illegal and unsafe and will void your warranty.
- · DO NOT move the appliance when in use.
- The BBQ must not have any overhead obstruction. e.g. trees, shrubs and lean to roofs.
- The BBQ must be used with a clearance of 1m around the Grill.
- Close the valve of the gas cylinder after use.
- The use of this BBQ in enclosed areas can be dangerous and is PROHIBITED.
- Neither the manufacturer nor their Agents can accept any liability for the unsuitability of, or any damage to, any food cooked on this appliance.
- It is not safe to use the Gas BBQ in strong wind conditions.
- Keep onlookers a safe distance away from the Gas BBQ when it is in use.



As with all gas appliances, misuse of this appliance or failure to fully follow these instructions may cause fire, injury or death.

Please read all the instructions before using your Gas BBQ.

The operator must understand all safety requirements as detailed in this manual before using the unit.

Please read the instructions carefully before use.

Retain this manual for future reference.

INDEX

WARRANTY	2
WARRANTY CLAIM PROCESS	3
IMPORTANT NOTICE	4
GENERAL INFORMATION	4
INSTALLATION	5
PARTS LIST	6
ATACAMA EXPLODED VIEW	6
ATACAMA ASSEMBLY	7-9
CONNECTING THE GAS HOSE TO THE BBQ	10
GAS CYLINDER	10
FITTING THE GAS CYLINDER TO THE APPLIANCE	10
LEAK TEST	11
REGULATOR AND HOSE	11
FIXING THE REGULATOR TO THE CYLINDER	12
LIGHTING YOUR GAS BBQ	12
MANUAL IGNITION	13
FLARE UP CONTROL	13
FLASHBACK (FLAME IN BURNER TUBE)	14
END OF COOKING OPERATION	14
STORAGE	14
CLEANING AND CARE	15
WARNING	18
FREQUENTLY ASKED QUESTIONS	18
SPECIFICATIONS	19
AFTER SALES SERVICE	19

<u>KEY</u>



Important information



Cautions and warnings.



Danger



Contact an approved ALVA technician.



Do It Yourself

WARRANTY

PLEASE RETAIN YOUR PROOF OF PURCHASE FOR WARRANTY CLAIMS.

This instruction manual is available as a digital download on Alva's website.

ALVA warrants this appliance to be free of defects in material and quality for a period of 12 months from date of original purchase. This warranty covers the intended use of this appliance – within a domestic setting and not for commercial or industrial purposes.

Any damage caused by wilful abuse, tampering, modification or unauthorized repair will not be warranted.

Please retain all packaging material, as items returned without original packaging material may be subject to a withholding fee.

Where this appliance is found to be defective, damaged, broken, or does not work correctly for the intended purpose, you must return the appliance to the retailer from where it was purchased.

The warranty will only be effected with valid proof of purchase. Failure to provide the proof of purchase will most likely result in the repair or service required being chargeable.

This warranty assures a reasonable level of care and maintenance of your appliance. Rust and weather damage are not warranted.

This warranty does not impact a consumer's right in terms of the Consumer Protection Act.



Thank you for your purchase of this Gas BBQ.
Please read these instructions carefully before use and keep them in a safe place for future reference.



Failure to follow these instructions may result in serious bodily injury and/or property damage.

If you have any questions concerning assembly or operation, consult your local dealer.

DO NOT move the Gas BBQ while in operation.

The Gas BBQ and cylinder must be placed on a level surface.

WARRANTY CLAIM PROCESS

Should you have a warranty claim, please contact our service department/customer care.

Alva will investigate, refurbish or replace such item as required in terms of the warranty.

In instances where warranty claims cannot be repaired or replaced, Alva can at its sole discretion opt to replace the item with something of equal or greater value.

At Alva's discretion, we may request to return such items for assessment.

This warranty will be voided for the following reasons:

- Damages, deterioration and/or rust, which is caused by weather, obvious misuse, commercial or industrial use, alterations or modifications, vandalism and/or neglect.
- Damages caused to burners and gas hoses by insects, rats or mice.
- Exposure to salt air and/or chlorine sources.
- · Severe weather conditions.
- · Fat fire due to poor care and maintenance.
- The use of any parts that are not the manufactured and supplied will invalidate this warranty in its entirety.

Product Warranty Periods			
BBQ Body	1 year, no rust/burn damage 1 year paint work (excluding fading or discoloration)		
Stainless Steel Burners	1 year, no rust/burn damage		
Vaporiser	1 year, no rust/burn damage		
Piezo Ignition and Valves	1 year, no rust/burn damage		
Grease Tray	1 year, no rust/burn damage		
Cooking grates	1 year, no rust/burn damage		
All remaining parts	1 year		

IMPORTANT NOTICE

This warranty does not extend any liability other than that rising in South African law. The warranty exclusively covers the appliance and offers no extensions to any third party or property. The owner acknowledges having read and understood these instructions.

No retailer or dealer may offer any warranty for this appliance other than those outlined in this warranty.

This warranty does not offer betterment, and Alva's obligation is to repair or replace the appliance (or component thereof) up to and not exceeding the original purchase price.

Alva will not entertain any claim where the terms of this warranty are breached.

Alva reserves the right to modify and improve its offering and products from time to time. No retroactive obligation exists where a product in Alva's range is replaced or improves post customer purchase.

Rust is not covered under the warranty.

If you have any questions while setting up or using this gas braai, please visit www.alva.co.za or call 086 100 ALVA (2582) or e-mail info@stingray.co.za

GENERAL INFORMATION

Before using this Gas BBQ, please read through this manual and make sure you understand everything. If you are not sure, call **086 100 ALVA (2582)** or visit www.alva.co.za for help.

This Gas BBQ is a safe and efficient appliance when used according to these instructions.

Reading and understanding this manual should give you a good indication of what to expect from your Gas BBQ.

If this product is not what you want or need, please help Alva and the environment by not damaging or destroying any part of the packaging.

Always keep your proof of purchase.

Keep these instructions for future use. If you lose this copy, you can obtain a new copy from your dealer or online at www.alva.co.za.

INSTALLATION

SELECTING A LOCATION

This BBQ is for outdoor use only and should be placed in a well-ventilated area. This appliance consumes oxygen and it is dangerous for the health and safety of the occupants to use this appliance in areas not properly ventilated.

Take care to ensure that it is not placed near or under any combustible surface.

Keep this BBQ away from flammable materials.

Table Top Gas BBQ dimensions (Minimum clearance of 150mm to the rear panel and 150mm to the bottom panel are necessary to ensure the air inlet and combustion products outlet openings remain unobstructed.



Failure to follow these instructions may result in serious bodily injury and/or property damage.


Never use Natural Gas in a unit designed for Liquid Propane (LP) Gas. LP gas is not Natural Gas. The conversion or attempted use of Natural Gas in an LP unit is dangerous and voids your warranty.

PARTS LIST

NOTE: Remove the Grill Parts from the box before assembly. Ensure that any transit protection is removed.


NO.	PART	QTY	NO.	PART	QTY
1		3			
3	The state of the s	3	2		1
4		1			
5		4	6		4
				M6*25	

ATACAMA 3 BURNER EXPLODED VIEW

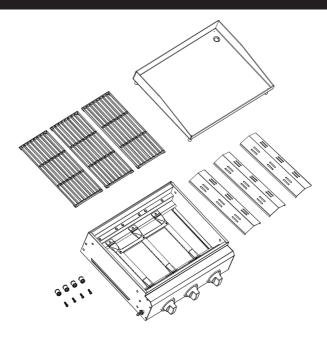


ATACAMA 3 BURNER - ASSEMBLY

1. Install the feet (Feet *4, M6*25 size screw *4)

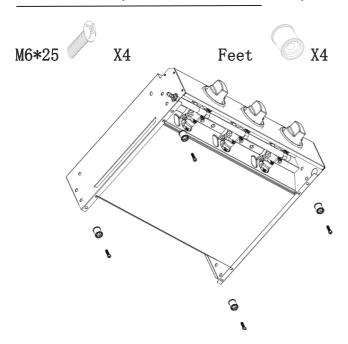


ASSEMBLY TO USE 3X COOKING GRIDS

2. Insert the flame tamers

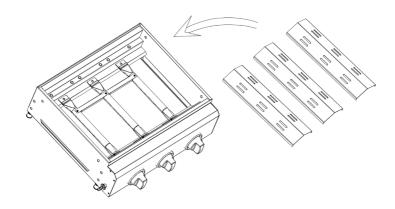

3. Insert the cooking grids

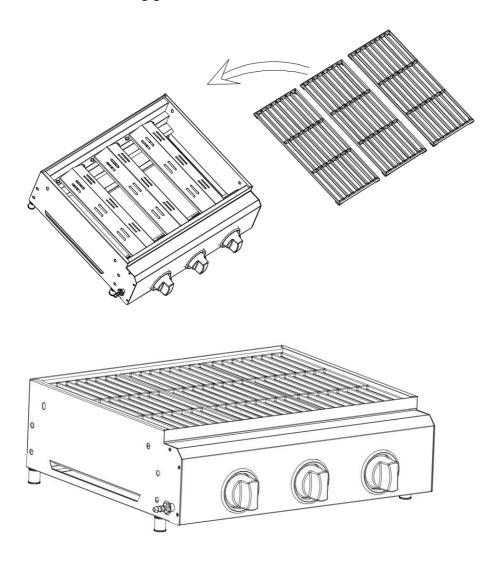


NOTE: Always allow the BBQ to cool sufficiently before changing the grids to the plancha or vice-versa.


8

ASSEMBLY TO USE THE PLANCHA PLATE

<u>WARNING:</u> When using the plancha top, please remember to remove all 3 flame tamers, otherwise the flames from the burner tubes will be suppressed.

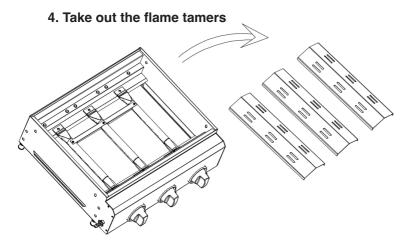

5. Set the plancha top

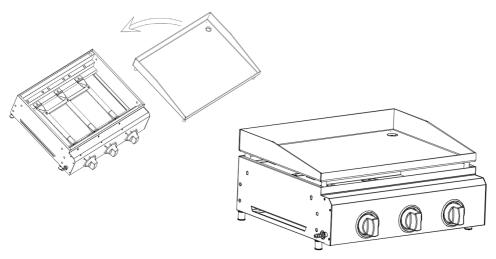

NOTE: Always allow the BBQ to cool sufficiently before changing the grids to the plancha or vice-versa.

CONNECTING THE GAS HOSE TO THE BBQ

Connect the gas hose to the gas manifold inlet on the BBQ. Do not overtighten. Do not use any sealing tape or liquid on the connection.

Tighten the supplied hose clamp over the hose at the gas manifold inlet

GAS CYLINDER

A 9kg ALVA gas cylinder with a 5/8 inch BSP left hand thread is recommended. This will match the supplied regulator. Cylinders must be stored in an upright position, in a well ventilated and damp free area and out of reach of children.

The cylinder must never be stored where temperatures can reach or exceed 50°C. Do not store the cylinder near open flames, pilot lights or any other sources of ignition. DO NOT SMOKE WHILE HANDLING THE CYLINDER

FITTING THE GAS CYLINDER TO THE APPLIANCE

This appliance is only suitable for use with LPG. This appliance is fitted with a 2.8kPa low pressure regulator.
BEFORE USE PLEASE CHECK FOR LEAKS
Never check for leaks with a naked flame, always use a soapy water solution.


- 1. Ensure the gas cylinder is turned off,
- 2. Connect the regulator to the cylinder
- 3. Check all the connections for gas leakage (see Leak *Test on following page*)



Before proceeding make certain that you understand the IMPORTANT INFORMATION section of this manual

LEAK TEST

The leak test must be carried out in a well-ventilated area, free from any flames or other sources of ignition.

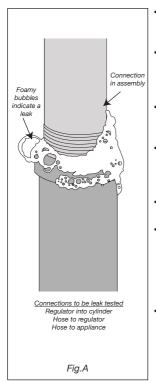

- With the cylinder connected to the Gas BBQ. Open the cylinder valve.
- Brush the connections
 (Gas BBQ to cylinder) with a
 solution of equal parts soap
 and water (must be foamy).
 A stream of bubbles forming
 - A stream of bubbles forming indicates a gas leak. (See *Fig.A*)
- If bubbles appear, turn the cylinder valve OFF (clockwise) and disconnect the Gas BBQ from the gas cylinder.
- Tighten the connection and retry the leak test.
- If you are unsure or if you cannot tighten the connection, place the cylinder outside in a cool, well-ventilated area and contact Alva on 086 100 ALVA (2582).
 - A leak between the regulator and cylinder can lead to a high pressure fire, which is very dangerous and can result in extensive injury or even death.



FOR YOUR SAFETY IF YOU SMELL GAS

- Turn off the gas supply at the cylinder.
- Extinguish all naked flames.
 DO NOT operate any electrical appliances.
- Ventilate the area.
- Check for leaks (see LEAK TEST)
- If odour persists, contact your dealer or local gas supplier immediately.



DO NOT attempt to use the BBQ if a leak is present.

NEVER test for leaks with an open flame.



How to do



http://www. youtube.com /watch?v=8L pZ1B0m23Y &feature=plcp

REGULATOR AND HOSE

Use only regulators and hose approved for LPG in accordance to the South African National Standards. The use of the wrong regulator or hose is unsafe; always check that you have the correct items before operating the barbecue.

The length of the hose must be 1.5 meters (maximum). Worn or damaged hose must be replaced. Ensure that the hose is not obstructed, kinked, or in contact with any part of the grill other than at its connection. The hose should not be twisted or kinked when attached to the gas cylinder. No part of the hose should touch any part of the appliance

FIXING THE REGULATOR TO THE CYLINDER

Ensure that all the BBQ control knobs are in the OFF position. Connect the regulator to the gas cylinder according to your regulator and cylinder dealer's instructions.

Always check that the bullnose seal on the regulator is in place and in good condition before connecting the regulator to the cylinder. Perform this check every time a cylinder is connected or changed. Always make sure that the thread is fully engaged and properly tightened.

Please note that the thread on the regulator is a LEFT HAND thread and must be turned in an ANTI-CLOCKWISE direction to tighten it when facing the cylinder valve.

LIGHTING YOUR GAS BBQ

- 1. Turn all the control knobs to the OFF position.
- 2. Turn 'ON' the gas supply at the cylinder valve following the regulator connection and operating instructions. Check the cylinder to regulator connection and hose to BBQ hose inlet connection for leakage using soapy water. Any leakage will show as bubbles in the area of the leak. If leak is found do not use the BBQ and contact our customer care line.
- To light the left hand burner, push down and turn the left burner control knob anti-clockwise to the 90° position (full rate position). Press & hold ignition button, You will hear a rapid series of "clicks" Your burner should light. If the burner has not lit, repeat this process.
- If the burner has not lit after two attempts, turn 'OFF' the control knob and wait 5 minutes before retrying the ignition sequence.
- When the burner has lit, the burner rate can be adjusted by pushing down and turning the knob anti-clockwise to any position between the full and low rate position.
- 6. Light the remaining burners from left to right in sequence.
- 7. To turn 'OFF' the BBQ, turn the cylinder valve hand wheel to the 'OFF' position. Once the burners have extinguished turn all the control knobs to the 'OFF' position.

If for some reason the burner(s) do not ignite, refer to the Manual Ignition instructions that follow:



If any burner fails to ignite, turn the control knob off (clockwise) and also turn the cylinder valve off. Wait five minutes before attempting to relight following the correct ignition sequence from left to right.

MANUAL IGNITION

- 1. Open the gas control valve at the cylinder.
- Remove the grids or plancha plate. The burners will be visible. First strike a 90mm BBQ match and hold it approximately 40 mm away from the LEFT hand burner and then turn the LEFT control knob anti-clockwise to the HIGH position
- 3. If the burner fails to ignite after 5 seconds, turn the control knob to the OFF position and wait 2 minutes. Restart the procedure from step 2. If you fail to ignite your BBQ, turn the control knob to OFF, close your cylinder valve and contact your local dealer for service.
- Light the burners in the same method, in order from left right. The burner will cross-ignite from the burner to its left. Adjust to the required heat setting.

The burner has an adjustable air control which is set by the manufacturer should the flame not be correct, i.e.

- · a long yellow flame, or
- · air gap between metal burner and bottom of blue flame, or
- · black soot coming off the top of the flame.

To overcome these problems, please loosen the set screw and rotate the metal air adjuster until the correct flame is burning. Re-tighten the set screw - to lock the metal air adjuster in place. At max gas setting, the correct flame profile should be blue with an orange tip at the top. The blue flame must not have an air gap to the Burner.

FLARE UP CONTROL

Flare-ups occur when meat is barbecuing on the grill and the juices fall on the hot vaporiser/flame tamer plate and vaporise. The smoke from some flare-up helps to give the meat its BBQ flavour, but excessive flare-up will result in the meat being burned and becoming bitter. To control excessive flare-up, it is advisable to trim excessive fat from meat and poultry before grilling; to control it further, the burners can be turned to the low setting.

Finally, extinguish excessive flare-ups by applying a small amount of baking soda directly onto the vaporiser / flame tamer plate. Always protect your hands when handling anything near the Grill cooking surface.

DO NOT ALLOW YOUR BBQ TO OVERHEAT.



IF any burner fails to ignite, turn the control knob off (clockwise) and also turn the cylinder valve off. Wait five minutes before attempting to relight following the correct ignition sequence from left to right.



Do not touch any hot BBQ parts.
The outside of the BBQ bottom especially becomes very hot during use. Use protective gloves to handle any parts that might become hot during use.

FLASHBACK (FLAME IN BURNER TUBE)

In the event of flash back whilst the BBQ is in use, turn all the controls and the cylinder valve to the 'OFF' position. Wait 5 minutes before attempting to relight the Grill. If the problem persists, check for blocked ventury ports by removing the burner and cleaning with compressed air or with a pipe cleaner. Replace burner correctly.

If problem persists do not try to rectify the problem yourself as this could result in serious injury and/or property damage.

END OF COOKING OPERATION

After each cooking session, turn the BBQ burners to the HIGH position and burn for 5 minutes. This procedure will burn off cooking residue, thus making cleaning easier. Turning off your BBQ.

When you have finished using your BBQ, turn off the gas at the cylinder, and then ensure that all the control valves are turned to the OFF position in sequence starting from the left hand and moving to the right hand side of the unit. Wait until the BBQ is sufficiently cool before moving or putting on the cover.

STORAGE

FIXINGS

Annual checking and tightening of metal fixings is recommended.

STORING YOUR BBQ

Store the appliance in a clean and dry environment. Do not store your gas cylinder indoors. Store in a well ventilated area away from direct sunlight or an electrical source.

Store your BBQ in a cool dry place. After having cleaned the burners, cover them with aluminium foil in order to prevent insects and other debris collecting in burner holes.

THE GAS CYLINDER SHOULD BE DISCONNECTED AND STORED OUTDOORS OR IN A WELL VENTILATED AREA.

When using the BBQ after extended periods of storage, please take note once again of the care, maintenance and safety instructions

CLEANING AND CARE

As with all appliances, proper care and maintenance will keep them in top operating condition and prolong their life. Your new gas BBQ is no exception. By following these cleaning procedures on a regular basis, your BBQ will remain clean and in good working order with the minimum of effort.



BEWARE OF SPIDERS AND WASPS. BURNER TUBES SHOULD BE INSPECTED AND CLEANED PERIODICALLY!

Spiders and small insects occasionally spin webs or make nests in the burner tubes during warehousing and transit. These webs can lead to a gas flow obstruction which could result in a fire in and around the burner tubes.

STAINLESS STEEL CARE

In order to preserve the stainless steel on your BBQ, we suggest applying a thin film of baby oil to the stainless steel body components of your BBQ on a regular basis. This is especially important at the coast. Once applied, you can wipe all excess baby oil residue off with a clean cloth.

NEVER USE OVEN CLEANER

Failure to follow these instructions may cause the BBQ to rust

To reduce the chance of FLASH-BACK, the procedure listed below should be followed at least once a month in late summer or early autumn when spiders are most active, or when your BBQ has not been used for an extended period of time.

BURNER TUBE CLEANING

Follow the procedure that is most convenient for you:


- Use a small bottle brush with a flexible handle. Run the brush up through each venturi tube and into the burner several times.
- Lay the burners down with the venturi tubes facing up, and force water through them. At this time, observe each burner port. Make sure water comes out of every hole. If not, clean the burners as follows


BURNER CLEANING

Regardless of which venturi cleaning procedure you used, we recommend that you complete the following steps to help prolong burner life.

- Scrub the entire outer surface of the burner with a non-metallic scouring pad to remove any loose corrosion.
- Clean any clogged holes with a stiff piece of wire (for example: an open paper clip).
- Inspect the burner assembly for any opening caused by corrosion.
- 4. If any openings due to corrosion are found, replace the
- Replace the burner and spring as described in the assembly instructions.
- Check the burner for proper location/seating after replacement.
- 7. Ensure that the valve orifices are inside the burner tube.

VISUALLY CHECKING BURNER FLAMES Occasionally observe burner flame for correct operation. See diagram below.

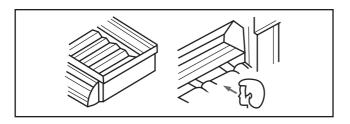

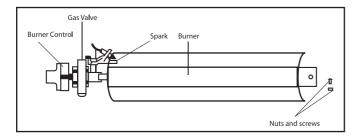



All cleaning and maintenance should be carried out when the BBQ is cool and with the gas supply turned OFF at the gas cylinder.



Never attempt to operate your barbecue without the burner tube being correctly located. A serious and immediate fire hazard would result.



VERY IMPORTANT The location of burner with respect to the orifice is vital to safe operation. Check to ensure the valve orifices are inside of the burner tubes before using your gas BBQ. If the burner tubes (venturi) are not fitted over the valve orifices and you start lighting the burners, an explosion and or fire might occur.

CLEANING THE PLANCHA PLATE

After cooking, turn the burner control to "OFF" and let the placha plate cool before attempting to clean. Before first use and after each time it is used we suggest you wash the plancha plate in a mild soap and warm water solution, rinse with water afterwards.

DO NOT USE A SCRAPPER/SCOURER OR ABRASIVE WASHING AGENTS AS THIS WILL DAMAGE THE NON-STICK SURFACE.

CLEANING THE GRIDS

After cooking, turn the burner control to "OFF" and let the BBQ cool before attempting to clean your grill plates. Before first use - as well as periodically - we suggest that you wash the grids in a mild soap and warm water solution. You can use a wash cloth, a vegetable brush, or non-metallic scouring pad to clean your grids.

The drip tray should be emptied and wiped down periodically and washed in a mild detergent and warm water solution.

A level layer of clean dry sand should be placed in the bottom of the drip tray to absorb the grease.

Lining the tray with aluminium foil before use will aid in cleaning.

ANNUAL CLEANING OF GRILL HOUSING

Burning-off the BBQ after cooking will keep it ready for instant use, however, once a year you should give the entire BBQ a thorough cleaning to keep it in top operating condition.

- 1. Turn the burner controls to the "OFF" position.
- 2. Turn the cylinder valve off fully.
- Detach the regulator assembly from cylinder valve by turning the quick coupling nut.
- Remove and clean (as explained above) the grids, flame tamer and burners.
- 5. Cover the gas valve orifices with aluminium foil.
- Brush the inside and bottom of the Grill with a cleaning brush, and wash down with a mild soap and warm water solution. Rinse thoroughly and let dry.
- Remove aluminium foil from orifices and check orifices for obstruction.
- Check spark electrode, adjusting it as instructed. Electrode tip pointing toward the tip of gas collector and approximately 5 mm from the tip of collector box.
- 9. Replace burners. Adjust spark electrode collector box.
- 10. Replace flame tamer, grids and warming rack.
- 11. Re-connect to gas supply.

WARNING

- The appliance is designed for outdoor use only.
- WARNING! Accessible parts may be very hot. Keep young children away.
- Read the instructions before using the appliance.
- Do not move the appliance while in use.
- Turn off the appliance at the cylinder valve after use.
- The Gas BBQ must not have any overhead obstructions e.g. trees, shrubs and lean to roofs.
- The Gas BBQ must be used with a clearance of 1m.
- The Gas BBQ must not be used near flammable materials (petroleum based products, thinners or any other solid object that carries a flammable warning label).
- Close the valve of the gas cylinder after use.
- The use of this Gas BBQ in enclosed areas can be dangerous and is PROHIBITED
- It is illegal and dangerous to change or modify any part of this appliance:
- The warranty will be voided against any and all claims if the unit has:
 - Not been assembled and operated in accordance with the instructions provided
 - b. Been used for commercial purposes
 - c. Been abused, misused or left exposed to the elements
 - d. Been damaged as a result of a fat fire
 - e. Any repairs, modifications or tampering, with this appliance by an unauthorised person is not allowed and will nullify the warranty.
 - f. Claim relates to rust.

FREQUENTLY ASKED QUESTIONS

Q: How long will the gas in my cylinder last?

A: This depends on how you use your BBQ. It is easy to calculate your gas consumption. Take the capacity of the gas cylinder in grams (i.e. 9000g for a 9kg cylinder) and divide it by the gas consumption of the appliance. The answer to the calculation is the approximate number of hours that your gas will last for.

Q: What do I do if I have an over-filled cylinder?

A: The best method to determine if your cylinder is overfilled is to weigh it. Subtract the 'tare' mass from the cylinder weight – this gives you the weight of your gas. If this gas weight exceeds your cylinder design weight (9kg) then return the cylinder to your gas supplier.



For use outdoors only and in well ventilated areas

WARNING: Accessible parts may be very hot, keep young children away

Read the instructions before using the appliance.

DO NOT move the appliance while in use.



How to test if your cylinder is overfilled



http://www. youtube.com/ watch?v=Ya vsYE8nzCw &feature=plcp

SPECIFICATIONS

Model	GBPR103
Description	ATACAMA Dual 3 Burner BBQ/ Grill
Gas Consumption at max	197gr/hr
Type of Gas	LPG
Operating pressure	2.8kPa

FOR USE OUTDOORS ONLY AND IN WELL VENTILATED AREAS. TO BE USED WITH A 2.8kPa SANS 1237 APPROVED REGULATOR WITH A MINIMUM DELIVERY CAPACITY OF 1kg/h WITH A SANS 1156-2 APPROVED HOSE.

REGULATOR AND HOSE SUPPLIED.

WARNING: ACCESSIBLE PARTS MAY BE VERY HOT. KEEP YOUNG CHILDREN AWAY.

READ THE INSTRUCTION LITERATURE
BEFORE USING THE APPLIANCE.
DO NOT MOVE THE APPLIANCE WHILE IN USE.

AFTER SALES SERVICE

MANUFACTURED FOR AND DISTRIBUTED BY ALVA A division of Stingray Accessory Manufacturers (Pty) Ltd P.O. Box 30014

Tokai, 7966 Tel: 021 442 1540

E-mail: info@stingray.co.za

www.alva.co.za
alvagas

www.facebook.com/AlvaGas

TOLL FREE NUMBER 086 100 ALVA (2582)

*SPARES are available from our online store www.stingray.co.za