



INSTRUCTION MANUAL


A-Frame Clothesline 22m



Product Code	CLAIRAFR
Date of purchase	
Name & location of supplier	

INTRODUCTION

Please check the carton contains all the required parts before assembly.

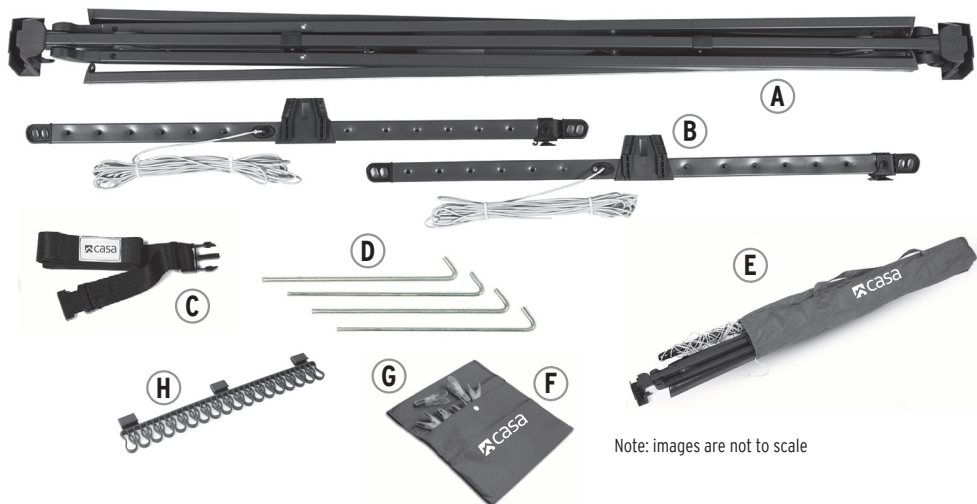

Note: images are not to scale

Carton Contents and Qty.

A - Frame & Leg Assembly	1
B - Arm & Line Assembly	2
C - Wind Tether	1
D - Ground Pegs	4
E - Storage Bag	1

Bonus Items.

F - Peg Bag	1
G - Pegs	12
H - Sock holder	1
Note: bonus items and storage bag are not covered under warranty.	

Spare Parts Available.

View our complete spare parts list at www.casahome.co.za or contact Stingray directly for any enquiries.

WARNING - READ BEFORE USE


- Do not allow children to play with or swing on the A-frame Clothesline or laundry items.
- When opening and closing your clothesline ensure that your hands are positioned where they will provide support and not get caught in moving parts.
- Not to be used for any purpose other than hanging and drying washing.
- Do not use clothesline if parts are worn or damaged.
- For best performance, hang heavy or large items over the inner lines leaving the outer lines for smaller items.
- Do not overload product. **Maximum load 22kg.**
- If using the Clothesline indoors we suggest attaching felt floor protectors to the underside of each leg to prevent scratching to your floor surface.
- Do not push or pull the clothesline across the ground as this puts unnecessary strain on the legs and hinge mechanism and could lead to breakage. To move the clothesline, lift completely from the ground and relocate. Use 2 persons if necessary.
- Do not over tension the clothesline cord. The cord should be tensioned so that the arms are straight and even on both sides of the clotheslines. See page 5.
- Store clothesline inside or under a covered area when not in use.

ASSEMBLY


We recommend a 2-person assembly for this product.

1. Open legs to the standing position.


Caution: Beware of pinch points when opening or closing the clothesline

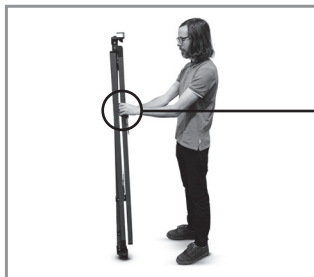

STEP 1. Stand frame on its end to open the outer pair of legs.

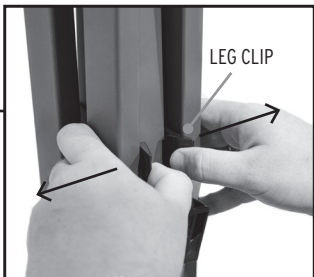

STEP 2. To release the legs, carefully spread open the leg clip whilst pulling outwards on the legs.

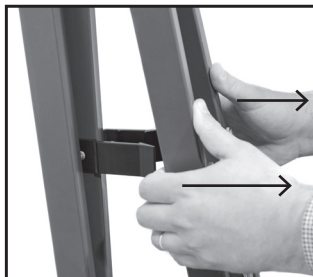



STEP 3. Slowly rotate the legs to the open position and rest on the ground. **Note:** the legs will automatically open as they rotate outwards.



STEP 4. The legs are fully open when the metal hinge is aligned and locked into the slider clip.



Gently push up on the hinge to ensure it locks into place (click sound).

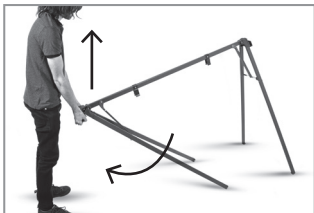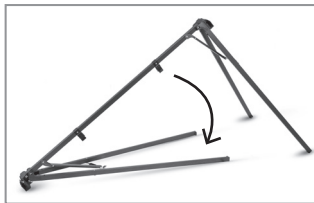


STEP 5. Repeat at other end. Carefully spread open the leg clip to release the legs. **Note:** Be careful to support the legs as they are released and open.



ASSEMBLY (CONTINUED)

2. Attach arms to frame

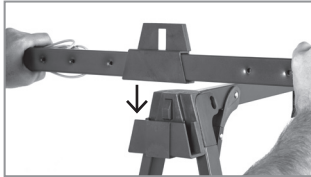


STEP 1. Take 1 arm assembly and slot into position as shown below.



STEP 2. The arm will lock into place and be held by the spring button.



STEP 3. Repeat this process for the other arm.

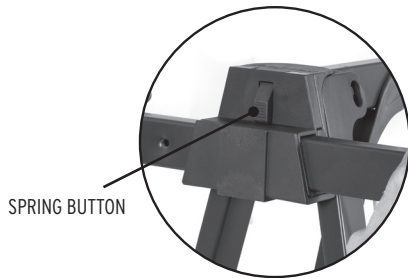


SPRING BUTTON




3. Thread the clothesline cord.

STEP 1. Thread the cord on both sides of the clothesline as shown below. Start at the inner most hole and work your way through to the outside hole and through the line tensioner.

STEP 2. Once fully threaded pull the cord reasonably tight to ensure there are no loose sections.

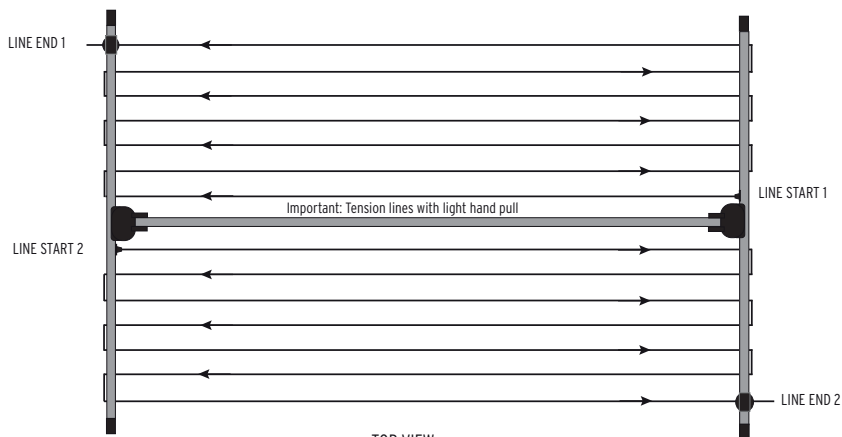

TOP VIEW

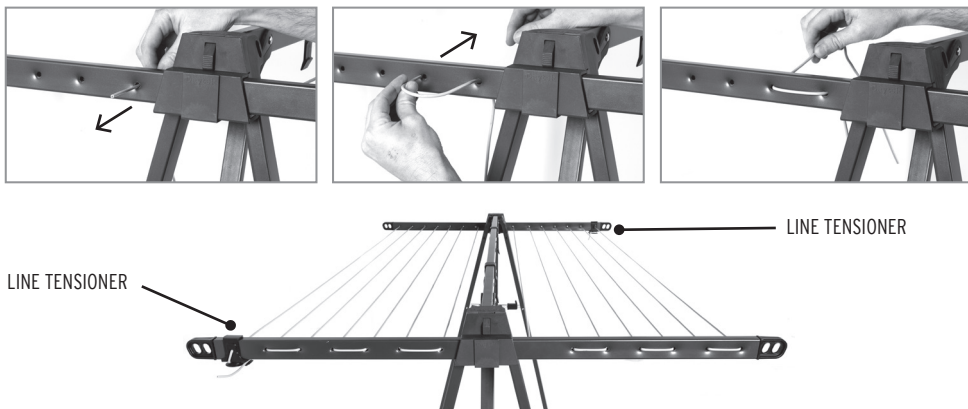


4. Secure the cord.


Secure the cord into the line tensioner as shown in the diagram and trim excess leaving approximately 100mm (10cm).

Note: The cord will stretch after initial use. We suggest re-tensioning the cord after several uses.


Caution: Do not over tension the cord as you could distort the frame and put unnecessary strain on the joint. Refer to diagrams below.

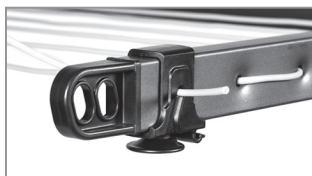



STEP 1. Thread line through tensioner. **STEP 2.** Pull line tight.

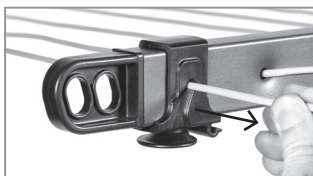

STEP 3. Loop line around tensioner knob 2-3 times.

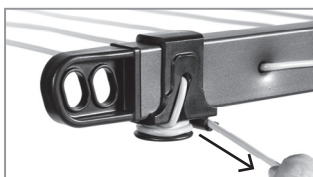

STEP 4. Lock line into clip and trim excess leaving approximately 10cm.

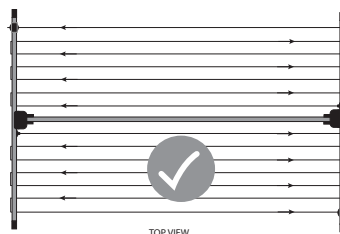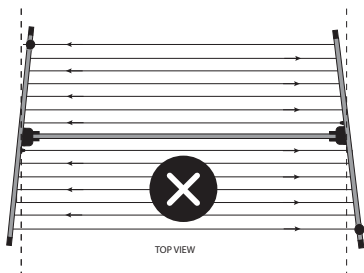

YOUR CASA A-FRAME CLOTHESLINE IS NOW READY FOR USE.

OPERATING YOUR CLOTHESLINE

Line Tensioning

STEP 1. Unhook line from the line tensioner.

STEP 2. Pull the line taut, starting at the inner most line and working your way to the outer line.

STEP 3. Secure the line back into the line tensioner.





Folding away and storing your clothesline

The clothesline can be completely disassembled to be stored in the provided storage bag, or alternatively the legs can simply be folded to store flat against a wall.

Caution: Beware of pinch points when opening or closing the clothesline.

1. Remove the arms

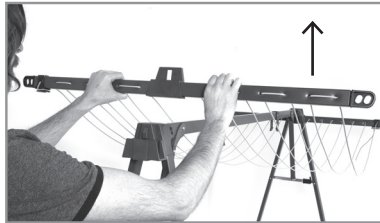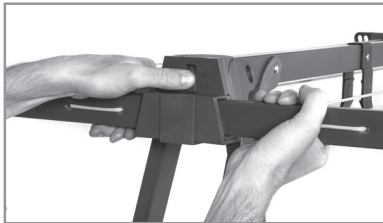

STEP 1. Press the spring button and lift upwards on the arm to release from the slot.

STEP 2. Repeat at the other side

2. Fold the legs


STEP 1. Push the slide lock to the side to release the metal hinge and carefully fold the legs upwards locking them into the leg clip.

Note: the legs will automatically close as they rotate inwards.

STEP 2. Place the folded end on the ground.

STEP 3. Repeat for the other side, folding the legs and locking into the leg clip.

STEP 4. The clothesline can be stored in the provided storage bag.


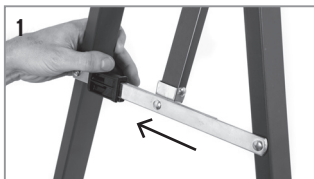


Wind Tether & Ground Pegs

When using your A-Frame Clothesline outdoors we recommend using the supplied wind tether to secure the clothesline to a fixed object like a post or railing to ensure it does not blow away in strong winds.

Alternatively, if your A-Frame Clothesline is positioned on a soft surface such as grass, the 4 legs can be secured using the

supplied ground pegs. Carefully insert the ground pegs through the holes in the leg caps. Gently press the pegs into the ground. Be careful not to damage the leg caps with excessive force.

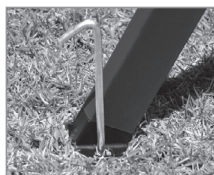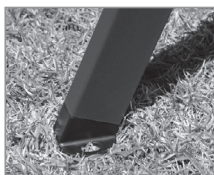

CARE AND MAINTENANCE

Regularly check your clothesline for damage or wear and tear. Any damaged part should be replaced or repaired before using again. A full range of spares are available through Stingray.

Do not overload product. **Maximum load 22kg.**

Spread washing evenly over the clothesline. For best performance, hang heavy or large items over the inner lines leaving the outer lines for smaller items.

Your clothesline should be stored inside and out of the weather when not in use. If you are living within close proximity to a seaside location, salt in the air will build up a thin layer on your clothesline over time. To ensure longevity it is important to regularly wipe down the surface of your clothesline with a damp cloth.

If this product does not function correctly please contact Stingray. Colours and design specification may change without notice

5 YEAR STRUCTURAL WARRANTY

1 YEAR WARRANTY ON THE CORD

This clothesline is warranted to be free of defects in workmanship and materials for a period of 5 (five) years from date of purchase, the exception is the cord which is warranted for a period of 1 (one) year.

Proof of purchase is required to validate claims, so please retain yours.

Before discarding packaging, please ascertain that this product is what is desired. Opening the packaging is considered acceptance that this product is suitable for use.

CASA (A DIVISION OF STINGRAY ACCESSORY MANUFACTURERS (PTY) LTD), CAPE TOWN, SOUTH AFRICA |

TEL: +27 21 442 1540 | 086 100 2582 | FAX: +27 21 448 8033

EMAIL: INFO@STINGRAY.CO.ZA | WWW.CASAHOME.CO.ZA |

 /CASA  WWW.FACEBOOK.COM/STINGRAYCASA