



Casa

ELECTRONIC BAMBOO
KITCHEN SCALE
CKSB01



- Max Capacity: 15kg
- Weighing unit switch between kg / lb
- Division: 1g
- LCD Display
- Automatic stand by time
- Clock Function
- Low battery indication
- 12 Month Warranty



Manufactured for and distributed by  casa

Adivision of Stingray Accessory Manufacturers (Pty) Ltd | Cape Town | South Africa

Tel: +27 21 442 1540 | 086 100 2582 | Fax: +27 21 448 8033

Email: info@stingray.co.za | www.casahome.co.za | www.facebook.com/stingraycasa

PLEASE RETAIN THIS MANUAL FOR FUTURE REFERENCE



DESCRIPTION OF PARTS

DESCRIPTION OF PARTS 1

INTRODUCTION 2

Proper Use	2
Technical data	2
Includes	2

SAFETY INSTRUCTIONS 2

General Safety Instructions	2
Safety Instructions for the Battery	3

OPERATION 4


Replacing the batteries	4
Weighing	4
Tare function	4
Changing the measuring unit	5
Clock setting	5
Countdown timer function	5
Countdown Timer Pause and Cancel	5
Countdown Timer Buzzer	6

CLEANING AND MAINTENANCE 6

DISPOSAL 6

TROUBLESHOOTING 7

WARRANTY 7

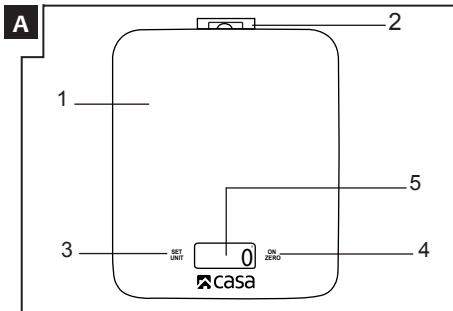

Kitchen scale (Figure A):

- 1 Bamboo weighing surface
- 2 Hanging hook
- 3 Set/Unit button
- 4 On/Zero button
- 5 Display screen

LCD Display (Figure B):

- 6 Countdown Timer symbol
- 7 Minus symbol
- 8 Numerical display
- 9 Unit indicator

INTRODUCTION

Before using the device for the first time, take time to familiarise yourself with the product. In addition, please carefully refer to the operating instructions and the safety advice below. Only use the product as described and for the indicated purpose. Keep these instructions in a safe place.

When passing this product on to others, please also include all the documents.

Proper Use

This appliance is designed to weigh food and liquid quantities. The product is for domestic use only and is not intended for medical or commercial use.

Technical data

Max. measuring range	15 000g / 15kg / 530oz / 33lb:oz / 525 fl'oz
Graduation	1g / 0.001kg / 0.04oz / 0.1lb:oz / 0.1fl'oz
Battery	2 x (1.5V) AAA

Includes

1x Electronic bamboo kitchen scale
1x instruction manual
2x batteries AAA 1.5V

Check that all the items are present and that the product and all its parts have no defects immediately after unpacking. **DO NOT** under any circumstances use the product if the package contents are incomplete.

SAFETY INSTRUCTIONS



KEEP ALL THE SAFETY ADVICE AND INSTRUCTIONS IN A SAFE PLACE FOR FUTURE REFERENCE!

General Safety Instructions



DANGER OF DEATH AND ACCIDENTS FOR TODDLERS AND CHILDREN!

- Never leave children unsupervised with the packaging material. The packaging material represents a danger of suffocation. Children frequently underestimate the dangers. Always keep children away from the packaging material.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children may not play with the kitchen scale. Cleaning and user maintenance may not be made by children without supervision.



CAUTION! DO NOT place more than 15 kg on the scale. This could damage the product.

- Do not expose the product to
 - extreme temperatures,
 - direct sunlight
 - magnetic fields,
 - moisture.

These can damage the product.

- Protect the product from electrostatic charge / discharge. This could hinder the internal data exchange, which may cause errors in the LCD readout.

- Check the product for damage before use. Never use a damaged product.

- Magnetic fields may cause the product not to function properly. If this happens, briefly remove the battery from the product and re-insert it.

- If necessary, clean the batteries and device contacts before inserting the battery.

- Remove the spent batteries immediately from the device. There is an increased danger of leaks!

- Keep the batteries away from children; DO NOT throw them in the fire, short-circuit them or take them apart.

- If the above instructions are not complied with, the batteries may discharge themselves beyond their end voltage. There is then a danger of leaking. If a battery has leaked inside your device, you should remove it immediately in order to prevent damage to the device!



AVOID CONTACT WITH THE SKIN, EYES AND MUCOUS MEMBRANES. ANY PARTS OF THE BODY COMING INTO CONTACT WITH BATTERY ACID SHOULD BE RINSED OFF WITH COPIOUS AMOUNTS OF WATER AND / OR A DOCTOR CONTACTED IF NECESSARY!



FOOD-SAFE! The taste and smell of your food are not detrimentally affected by this product.

Safety Instructions for the Battery




CAUTION! DANGER OF EXPLOSION! THE BATTERY MUST NEVER BE RECHARGED!

- Remove the batteries from the device if it is not going to be used for a prolonged period.
- When inserting the batteries, ensure the batteries are used with the correct polarity. This is shown in the battery compartment.

OPERATION

Replacing the batteries

- Open the battery compartment at the bottom of the scale.
- Insert AAA 1.5V type batteries in the battery compartment.

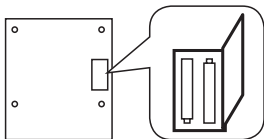

- Close the battery compartment.
- When the batteries are installed the LCD screen shows the time. (To setup the time see the “Clock Setting”)



- To enter the weighing mode press “ON/ZERO” button and the LCD screen shows “0”



Weighing

Set the kitchen scale on a solid, level and flat surface to weigh.

Briefly touch the ON/ZERO button to switch on the kitchen scale. The LCD display will show “0”.

Note: If the scale is turned on with a container placed on it, the weight of the container will not be taken into account during measurement

Place the item you wish to weigh into the container. The numerical display will show the weight of the item you are weighing.

Tare Function

After starting the scale, it is possible to use the tare function, i.e. specify the weight of the product without packaging. To do this, weigh the packaging (e.g. a jar), then briefly press the ON/ZERO button, wait until “0” appears on the display, and then weigh the product together with the packaging (e.g. a jar of flour).

NOTE: When batteries need replacing the display will show



New batteries can be obtained from www.stingray.co.za.



CAUTION! DO NOT place more than 15 kg on the scale. This could damage the product. In case of exceeding this limit, the scale will display an error message “E E E E”

Changing the Measuring Unit

After turning the scale on, it is possible to change the mass/volume unit with the SET/UNIT button. Each time the button is pressed, the unit will change.

g / kg / oz / lb:oz / fl'oz

Clock Setting

1. To set hours press and hold the “SET/UNIT” button for 2 seconds. To advance the hours press the “UNIT” button.

2. To set minutes press the “ON/ZERO” button and to advance the minutes press the “UNIT” button.

3. To complete time setting press the “ON/ZERO” button.

4. Switching Between 12hr and 24hr Clock
When setting the hours it starts in 12hr system am -> pm. After 11pm the clock will automatically switch to 24hr clock. After 23hrs it will automatically revert back to 12hr clock setting.



Countdown Timer Function

1. When the scale shows the time, press the “SET/UNIT” button to enter the countdown timer mode.

In the weighing mode, press and hold the SET/UNIT” button for 2 seconds.

The countdown timer defaults to 1 minute setting.



2. In the timer mode, press the “ON/ZERO” button to setup timer(minutes). Press “SET/UNIT” button to increase time by 1 minute. For rapid minute increase, hold down “SET/UNIT” button.

3. Press the “ON/ZERO” button again to setup seconds. Press “SET/UNIT” button to increase time by 1 second. For rapid second increase, hold down “SET/UNIT” button.

4. Press “ON/ZERO” to start the countdown timer.

Countdown Timer Pause and Cancel

During the countdown mode, Press “UNIT” to pause the timer. Press “UNIT” again to continue timer.

During the countdown mode, press “ON/ZERO” to cancel timer.

Press "ON/ZERO" again to clear remaining time. Press and hold "ON/ZERO" button for 2 seconds, the scale will display the time.

Countdown Timer Buzzer

When countdown timer reaches "0", it will make a buzzing sound for 1 minute. To switch off buzzer press "SET/UNIT" button.

CLEANING AND MAINTENANCE

Never immerse the product in water or other liquids. This can damage the product. Use a damp fluff free cloth to wipe scale.

DISPOSAL



The packaging is made entirely of recyclable materials, which you may dispose of at local recycling facilities.

Contact your local refuse disposal authority for more details of how to dispose of your worn-out product.



To help protect the environment, please dispose of the product properly when it has reached the end of its useful life and not in the household waste. Information on collection points and their opening hours can be obtained from your local

authority. Return the batteries and / or the device through the special waste collection points available.

Faulty or used batteries must be recycled in accordance with Directive 2006 / 66 /EC. Please return the batteries and / or the device to the available collection points.



Environmental damage through incorrect disposal of the batteries!

Batteries may not be disposed of with the usual domestic waste. They may contain toxic heavy metals and are subject to hazardous waste treatment rules and regulations. The chemical symbols for heavy metals are as follows:

Cd = cadmium, Hg = mercury, Pb = lead. That is why you should dispose of used batteries at a local collection point.

TROUBLESHOOTING

If any irregularities are found during operation of the appliance, read the below table to identify the cause and to find a solution to the problems.


PROBLEM	PROBABLE CAUSE	SOLUTION
The scale does not start.	The battery is exhausted.	Replace the battery with a new one.
	Protective film is not removed from the battery compartment.	Remove the protective film located in the battery compartment.
Error on the screen EEEE.	Display error.	Turn the scale on and off.
	The scale is overloaded.	Make sure that the weighted product does not exceed 15kg.
07 Message on the screen [Lo].	Batteries are discharged.	Replace the batteries with new ones.

WARRANTY

This scale is warranted to be free of defects in workmanship and materials for a period of 1 (one) year from date of purchase. Proof of purchase is required to validate claims, so please retain yours. Before discarding packaging, please ascertain that this product is what is desired. Opening the packaging is considered acceptance that this product is suitable for use.

CONTACT US

CASA quality products are manufactured for and distributed by:

 **CASA**
A division of Stingray Accessory
Manufacturers (Pty) Ltd
P.O. Box 30014
Tokai
Cape Town
7966

Tel: 086 100 2582 or 021 442 1540

E-mail: info@stingray.co.za

www.casahome.co.za

 www.facebook.com/stingraycasa