

# ALVA

**DOUBLE BURNER WITH 2 SOLID PLATES**  
TWO TRADITIONAL GAS BURNERS FOR TRADITIONAL  
COOKING & TWO SOLID PLATES FOR FRYING, WITH WIND SHIELDS



*Life's a Gas*

- THIS IS A LOW PRESSURE APPLIANCE TO BE USED ONLY WITH A 2.8kPa SANS 1237 APPROVED REGULATOR. REGULATOR NOT INCLUDED.
- FOR YOUR OWN SAFETY, PLEASE READ THIS MANUAL CAREFULLY AND ALWAYS OPERATE THIS PRODUCT ACCORDING TO THE INSTRUCTIONS
- IT IS ILLEGAL AND DANGEROUS TO CHANGE OR MODIFY ANY PART OF THIS APPLIANCE
- FOR OUTDOOR USE ONLY



APPROVED FOR USE IN  
SOUTH AFRICA

Manufactured for  
and Distributed by:

**ALVA**  
*Life's a Gas*

ALVA Marketing (Pty) Ltd | P.O. Box 30014, Tokai, 7966 | +27 21 442 1540 | info@stingray.co.za | www.alva.co.za  
TOLL FREE NUMBER: 086 100 ALVA (2582)

 /StingrayGroupSA

 /Alvagas

## IMPORTANT SAFETY INFORMATION

- Please read these instructions carefully before using your cooker.
- The operator must understand all safety requirements as detailed in this manual before using the unit.
- The operator is responsible for the safety of all third parties while the cooker is in use.
- The manufacturer's warranty may be voided by incorrect use of this product.
- If you have any queries regarding these instructions, contact your local dealer for clarification before you use your cooker.
- The unit must be thoroughly checked before use.
- Failure to follow the manual's instructions could result in damage or serious injury.
- Ensure that the cooker is positioned on an even and secure surface before operating.
- Ensure that all gas fittings are correctly and firmly fitted. Do this check every time before use.
- DO NOT store flammable materials near the cooker.
- DO NOT place or use aerosol sprays near the cooker.
- Use only the gas type specified on the tech data label of the unit.
- DO NOT leave the cooker unattended when it is alight.
- Onlookers should keep a safe distance away from the cooker when it is in use.
- Keep children and animals well away while the cooker is in use.
- Parts of the cooker will get extremely hot and could cause serious burns - test every surface before touching it.
- Be very careful when operating the cooker. The operator should pay constant attention to the food being cooked and should remain at the appliance at all times when it is alight.
- Ensure that the gas supply is turned OFF after use and while the cooker is unattended.
- When turning off the cooker, first turn off the gas at the gas cylinder before turning all the knobs to the 'OFF' position.
- Neither the Manufacturer nor their Agents can accept any liability for the unsuitability of, or any damage to, any food cooked on this appliance.
- Any modification to the stove may cause injury or property damage.
- Any modification to the stove will invalidate the guarantee on this appliance.
- FOR OUTDOOR USE ONLY.



*Please read the instructions carefully before use.*

*Retain this manual for future reference*

## INDEX

FEATURES	2
CAUTION	2
SETTING UP YOUR COOKER	4 - 5
LEAK TEST	6
FITTING AND CHANGING THE GAS CYLINDER	6
USING THE COOKER	7
TO LIGHT THE BURNERS	
TO TURN THE BURNERS OFF	
CARE AND MAINTENANCE	8
TROUBLE SHOOTING GUIDE	9
IT DOES NOT IGNITE	
IT SMELLS OF GAS	
COMBUSTION IS ABNORMAL	
SPECIFICATIONS	10
AFTER SALES SERVICE	10

### KEY

*Notes marked with the following;*



*Contain important information*

*Notes marked with the following;*



*Contain cautions and warnings.*

## FEATURES

- Stainless Steel Surface.
- Sturdy pot holder.
- No tangle hose connector.
- Burner design allows for wide heat spread.
- High efficiency.
- Precision Control.
- 2x Non-Stick Solid Plates included for frying / braaing.
- Convenient fold up design
- Wind protection for sides and rear



*Thank you for your purchase of this gas cooker.*

*Please read these instructions carefully before use and keep them in a safe place for future reference.*

## CAUTION

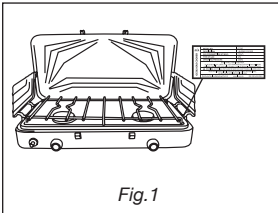 


Fig.1

- DO NOT use any gas other than that which specified on the tech data label attached (Fig.1). LPG

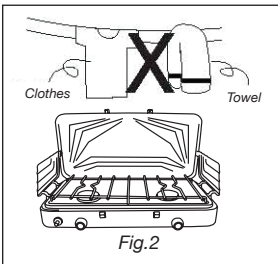 


Fig.2

- Use for cooking only. Do not dry towels, clothes, or anything else over it. (Fig.2)
- Avoid covering the flame with a big plate which covers the gas cooker.
- DO NOT use the gas stove in windy conditions.



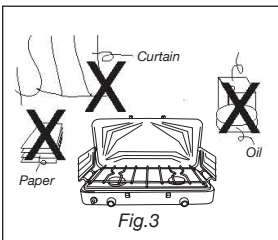 


Fig.3

 
- Make sure that there are no inflammables near the gas cooker. (Fig. 3)

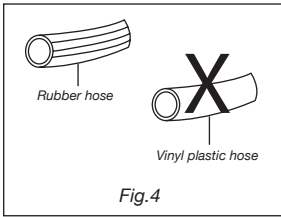

 
- Only use a SANS 1156-2 or EN16436 approved gas hose. (Fig. 4)

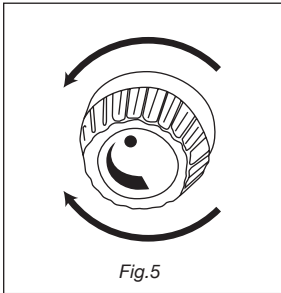

 - After use, turn the ignition knobs back to the OFF position and make sure the burners are OFF. (Fig. 5)
- When the stove is not in use, turn off the gas supply at the cylinder.
- Avoid touching the top housing of the cooker as the surface can be very hot during operation.

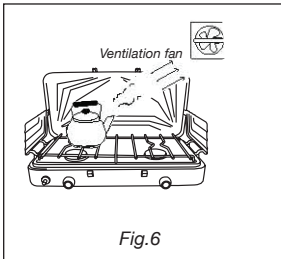

 - Observe flame stability from time to time while in use. (Fig.6)

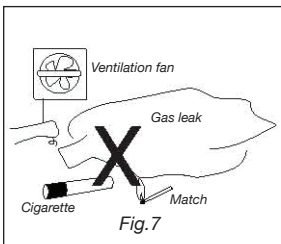

- When detecting a gas leak or if you smell gas, close the valve at the cylinder. Turn the control knob to the OFF position and open windows to ventilate the room so the gas can clear. DO NOT use a match or naked flame to check for leaks! Only use a soapy mix. Brush a 50 /50 soap and water solution on all the joints to observe for leaks. (Small bubbles will appear should there be a leak).

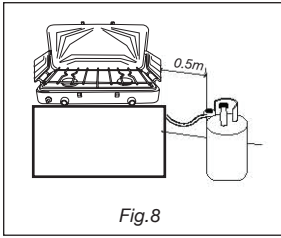 


Fig.8

Contact customer care if the leak persists after tightening the joints.

- Place the gas cylinder at least 0.5m away from the stove in an upright position. (Fig. 8)
- Only use LPG gas.
- For safety reasons, the control /ignition knobs are designed to operate in anti-clockwise rotation.

- In the event of a burn back (i.e. where the gas burns back on to the jet), turn off the stove and light again. Should the problem persist, take the unit back to your dealer to be checked.
  - Turn the stove off at the switch controls
  - Disconnect the regulator and wait for the stove to cool down ( $\pm 30$  minutes)
  - If on relighting, the problem reoccurs, get the unit checked by an authorised service dealer
- Always check that the regulator seal is in place and in good condition. Always ensure that the hose clamps are tightened and in place. Always ensure that the hose does not show any signs of wear. If in doubt please consult your dealer.

## SETTING UP YOUR COOKER

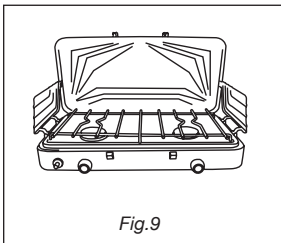 


Fig.9

1. This cooker is designed to operate using LPG gas.
2. When unpacking, make sure that all of the parts of the gas cooker are included.

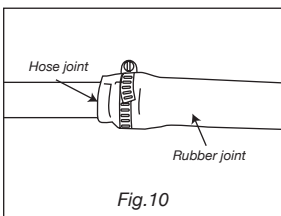 


Fig.10

3. Push the hose over the hose nipple until it is fully engaged. Tighten properly with the hose end clamp. (Fig. 10)
4. Perform the LEAK TEST on Page 6.



*Note: This appliance is designed for use with a 2.8 kPa SANS 1237 regulator with SANS 1156-2 or EN16436 approved hose. Using any other type of regulator or hose is extremely dangerous.*

*Regulator and hose sold separately.*



**FOR YOUR SAFETY  
IF YOU SMELL GAS**

- Turn off the gas supply at the bottle.
- Extinguish all naked flames. **DO NOT** operate any electrical appliances.
- Ventilate the area.
- Check for leaks (see LEAK TEST)
- If odour persists, contact your dealer or local gas supplier immediately



- **NOTE:** Exercise caution frying high fat content foods.

**NOTE:**

*A domestic type 3, 4.5 & 9kg Gas cylinder can be used with this appliance.*

*When connecting the appliance to the hose and regulator - Make sure that you are matching the correct regulator to the correct cylinder type.*

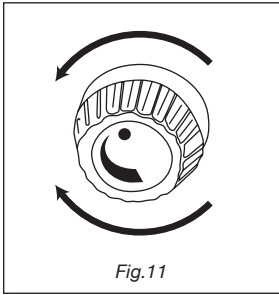 


Fig. 11

5. Ensure that the burner control valves are OFF by turning the knobs fully clockwise to the OFF position. See Fig. 11
6. Set the pot stand on to the stove frame. Inserting the stand into the securing holes.

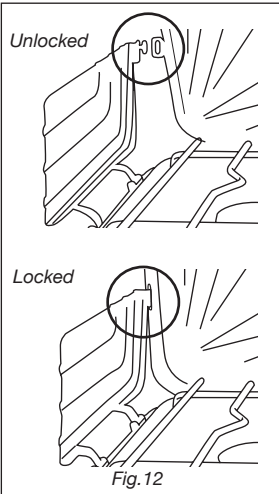 


Fig. 12

- Before use -To open the cooker lid - lift the 2x clips on the face of the unit upwards - releasing the catch.
7. Locate positioning for use. See Fig. 12
  - Lift the 2 side flaps and lock lid latch tabs into place, by securing the latch tab into the slot situated in the flap on each side of the unit. See Fig. 12

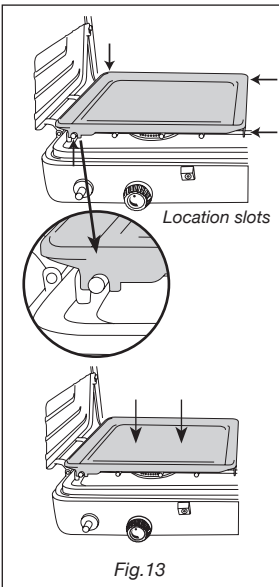 


Fig. 13

8. Turn the gas control knob to the ON position, Depress the separate RED ignitor button to ignite the cooker. (Fig. 11)
9. When using the solid plates, make sure that they are securely clipped onto the wire rack, by locating the slots shown in the image. Once in place, push down firmly to make sure the plates are secure. (Fig. 13)

Once you are finished using the unit - push the lid down firmly - so that the clips "Click" into place.

**BEFORE USING THE SOLID PLATES:**

The solid plates are non-stick and must be washed with warm soapy water before use.

**CLEANING SOLID PLATES:**

The solid plates are washed and dried in the same way as a domestic pot or pan using warm soapy water. Do not use abrasive scouring pads to clean the solid plates as this will remove the non-stick coating.

 
**DO NOT** put the solid plates into the dishwasher.

**COOKING ON THE SOLID PLATES:**

The solid plates are great for frying onions, mushrooms, burger patties, flapjacks or any cooking that needs a solid plate.

## LEAK TEST

The leak test must be carried out in a well-ventilated area, free from any flames or other sources of ignition.

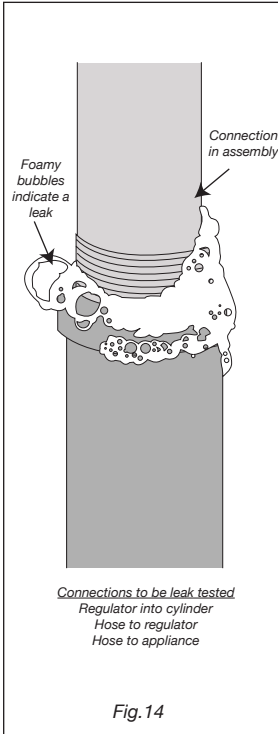

- With the cylinder connected to the stove, open the cylinder valve.
- Brush the connections (stove to cylinder) with a solution of equal parts soap and water (make sure it's foamy).
- A stream of bubbles forming indicates a gas leak. (See Fig. 14)
- If bubbles appear, turn the cylinder valve OFF (clockwise) and disconnect the stove from the gas cylinder.
- Tighten the connection and retry the leak test.
- If you are unsure or if you cannot tighten the connection, place the cylinder outside in a cool, well-ventilated area and contact Alva on **086 100 ALVA (2582)**.
- A leak between the stove and cylinder can lead to a high pressure fire, which is very dangerous and can result in extensive injury or even death.



### PRECAUTIONS

*Leak test all connections after each tank refill*



*NEVER check for leaks with a match or open flame*

## FITTING AND CHANGING THE GAS CYLINDER

1. Before connecting the appliance to a gas cylinder, always ensure that the rubber seal on the Regulator is in position and in good condition, and blow out any dust from the cylinder opening to prevent possible blockage of the jet.
2. Ensure that the gas cylinder is fitted or changed in a well-ventilated location, preferably outdoors, away from any source of ignition, such as naked flames and away from other people.
3. Make sure that the gas cylinder is kept upright at all times, screw the regulator onto the cylinder until it is fully engaged. Hand-tighten only.



*Any LP Gas cylinder not connected for use must not be stored in the vicinity of this or any other appliance.*



4. Never store the cylinder on a stove surface. It is best practice to store it on the floor in a position where it cannot be tampered with.
5. If there is a leak on your appliance (smell of gas), take it outside immediately into a well-ventilated flame free location where the leak may be detected and stopped.
6. When removing a gas cylinder (e.g. to change cylinders), firstly close the cylinder valve and then the appliance valve, making sure the flame is extinguished, before unscrewing the regulator. Re-fit the regulator to a full cylinder following the same precautions as above.
7. Always check that the regulator seal is in place and in good condition. Always ensure that the hose clamps are tightened and in place. Always ensure that the hose does not show any signs of wear. If in doubt please consult a dealer.

## USING THE COOKER

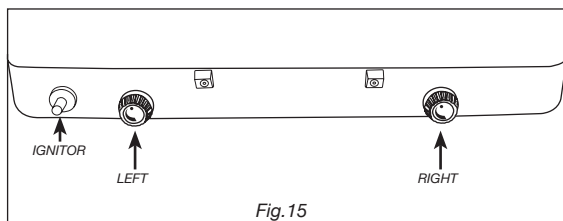 


Fig.15

### TO LIGHT THE BURNERS:

- Open the gas cylinder valve 1½ turns.
- Turn the gas control knob onto the “ON” position. Then using the “RED” ignitor control to ignite the burner, making sure that the burner has been lit. (Fig. 15)
- To adjust the flame size, set the gas control knob to a suitable position between MAX (full flame size) and MIN position (small flame size).

### TO TURN THE BURNERS OFF:

Turn the gas control knobs back to the OFF position. Make sure the burners are out and turn off the main gas cylinder valve as well.



*DO NOT store or use gasoline or other flammable vapours and liquids in the vicinity of this or any other appliance*



*DO NOT use pots that are larger or over hang the body of this cooker.*

In the event of a burn back (i.e. where the gas burns back on to the jet), turn off the stove and light again. Should the problem persist, take the unit back to your dealer to be checked.

- Turn the stove off at the switch controls
- Disconnect the regulator and wait for the stove to cool down ( $\pm$  30 minutes)
- If on relighting, the problem reoccurs, get the unit checked by an authorised service dealer

## CARE AND MAINTENANCE

- Before caring for, or cleaning your cooker, make sure that the main gas valve is in an "OFF or closed" position, and the stove control knobs are in the "OFF" position. If the stove is still hot, wait for it to cool down before cleaning.
- Ensure that there are no signs of blockage (eg. debris, insects, etc) in either the burner portholes, the primary air inlet. Use compressed air or pipe cleaner wire to clear obstructions.  
WE RECOMMEND THAT THIS SHOULD BE DONE AFTER EVERY COOKING SESSION IN COASTAL AREAS.  
Taking care of your stove will prolong its lifespan.
- Check the gas hose regularly for wear or leaks. It must be replaced occasionally. Keep it away from heat sources and keep it clean.
- Wipe the stainless steel plate under the burner and body with a dry cloth. If it is difficult to clean, use soapy water and then dry thoroughly with a dry cloth.
- Wash the pot holder in water and dry thoroughly before replacing.
- Wash the non-stick solid plates with warm soapy water. Do not use any metal utensils as they may scratch and damage the non-stick surface.
- Do not use any abrasive cleaning agents as this will damage the non-stick surface.

 


*DO NOT use pot scourers or abrasive cleaning products on this cooker as these will permanently mark the cooker.*

- For better service and a longer service life, keep the gas cooker clean and store it in a dry place.
- Always disconnect the cooker when it will not be used for an extended period of time.

## TROUBLE SHOOTING GUIDE

TROUBLE	CAUSE	REMEDY
It does not ignite	<ul style="list-style-type: none"> <li>• Main gas valve is closed</li> <li>• Rubber hose is bent</li> <li>• No gas supply</li> <li>• Electronic ignition is wet</li> <li>• Piezo ignition enhancer out of position</li> </ul>	<ul style="list-style-type: none"> <li>• Open it</li> <li>• Put it right or replace it</li> <li>• Replace gas cylinder</li> <li>• Clean and dry</li> <li>• Bend into position +/- 90° in front of piezo ignition pin</li> </ul>
It smells of gas	<ul style="list-style-type: none"> <li>• Gas leak from pipe</li> <li>• Rubber hose is damaged</li> <li>• Burner is not lit</li> </ul>	<ul style="list-style-type: none"> <li>• Examine pipe using soap water, and replace it.</li> <li>• Replace it</li> <li>• Re-ignite it</li> </ul>
Combustion is abnormal	<ul style="list-style-type: none"> <li>• Lack of gas supply</li> <li>• Flame ports are clogged</li> <li>• Burner is not in its correct position</li> </ul>	<ul style="list-style-type: none"> <li>• Replace gas cylinder</li> <li>• Clean them</li> <li>• Place it in the right position</li> </ul>

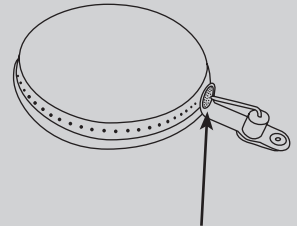

*Piezo ignition enhancer position*



*If you are still unable to correct the problem with the information in this guide, then contact our customer care.*

## SPECIFICATIONS

Model	GCS09
Description	DOUBLE BURNER
Gas	LP Gas only
Ignition system	Piezo ignition (PZT)
Hose	SANS 1156-2 or EN16436
Rated pressure (Pa)	2.8kPa
Gas consumption at Max	380 g/h
Jet Size	2x 0.85mm
TO BE USED WITH A 2.8 kPa SANS 1237 APPROVED REGULATOR ONLY, WITH A MINIMUM CAPACITY OF 1kg/hr	
Any modification to the stove may cause injury or property damage.	
Any modification to the stove will invalidate the guarantee on this appliance.	
FOR OUTDOORS USE ONLY	

## AFTER SALES SERVICE

MANUFACTURED FOR AND DISTRIBUTED BY

Alva Marketing (Pty) Ltd


P.O. Box 30014


Tokai, 7966

Tel: 021 442 1540

E-mail: [info@stingray.co.za](mailto:info@stingray.co.za)

[www.alva.co.za](http://www.alva.co.za)

 @StingrayGroupSA

 [www.facebook.com/AlvaGas](http://www.facebook.com/AlvaGas)

TOLL FREE NUMBER

**086 100 ALVA (2582)**



*Should you experience problems with this gas cooker, carry out the necessary checks as per the Trouble Shooting Guide . If you are still unable to correct the problem with the information in this guide, then contact your nearest dealer or manufacturer.*