 


ALVA

MINI KITCHEN OVEN

25L ELECTRIC OVEN & ELECTRIC HOTPLATES

ESO002

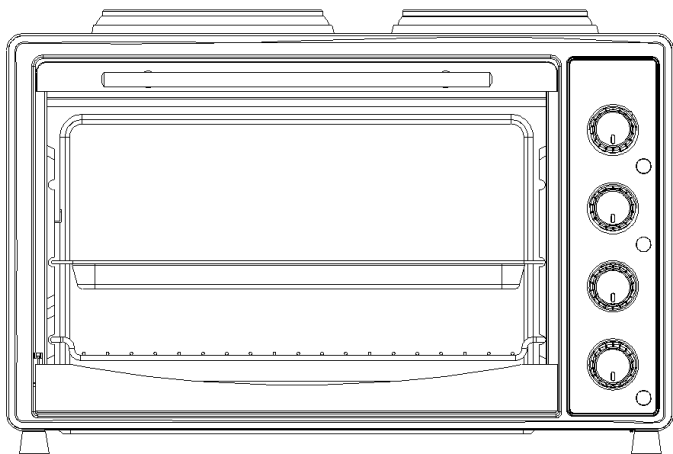

Your world is better with Alva

- FOR YOUR OWN SAFETY, PLEASE READ THIS MANUAL CAREFULLY AND ALWAYS OPERATE THIS PRODUCT ACCORDING TO THE INSTRUCTIONS
- IT IS ILLEGAL AND DANGEROUS TO CHANGE OR MODIFY ANY PART OF THIS APPLIANCE
- THANK YOU FOR YOUR PURCHASE OF OUR ELECTRIC OVEN. TO CONFIRM CORRECT OPERATION AND YOUR SAFETY, PLEASE READ THIS MANUAL CAREFULLY BEFORE USE AND RETAIN IT FOR FURTHER REFERENCE.

Manufactured for **ALVA** A division of Stingray Accessory Manufacturers (Pty) Ltd | P.O. Box 30014, Tokai, 7966 | +27 21 442 1540
and distributed by: **ALVA** info@stingray.co.za | www.alva.co.za | TOLL-FREE NUMBER: 086 100 ALVA (2582)

 /alvagas

 /Alva

IMPORTANT SAFETY INFORMATION

As with all appliances, misuse of this appliance or failure to fully follow these instructions may cause fire, injury or death.

Please read all the instructions before using your oven.

- Before using this appliance check that the voltage indicated on the type plate corresponds to your mains supply voltage.
- DO NOT use this oven with an external timer, separate remote - control system or any other device that switches the oven on or off automatically.
- There is a fire risk if the oven is covered or positioned incorrectly.
- Always disconnect the oven from the electricity mains during installation, when not in use and cleaning.
- Always ensure that the power cord is kept away from the body of the oven. The oven body will get very hot while in use and can melt the cable.
- Always inspect the power cord for signs of wear or damage. If wear or damage is noted, a suitably qualified person should replace it immediately. Failing to do so is a hazard and may lead to fire and/or electrocution/electric shock and/or property damage and/or death.
- NEVER allow the cord to come into contact with wet or hot surfaces or become twisted.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- To protect against electric shock, do not immerse cord, plug, or main part of the oven in water or other liquids.
- DO NOT damage and DO NOT kink the power cord.
- DO NOT pull cord or lay heavy items on it.
- Unplug from outlet when not in use to prevent electric shock or fire.
- DO NOT cover or obstruct the oven when in use.
- DO NOT insert any objects through any slot or opening in the oven.
- Users must not disassemble the oven, or change/substitute any parts of this oven, if the oven is faulty it is extremely dangerous to use it.
- Keep the oven a distance of at least 1 meter from any combustible material, such as furniture, curtains, bedding, clothes or paper.
- Keep the oven clean. DO NOT allow objects to enter the ventilation, as this may cause electric shock, fire or damage the oven.
- NEVER touch the appliance with wet or damp hands or feet.
- NEVER expose the appliance to atmospheric conditions (rain, sun, etc)
- DO NOT use the appliance for anything other than its intended use.
- DO NOT use this oven in the immediate surroundings of a bath, a shower or a swimming pool.



Please read the instructions carefully before use.

Retain this manual for future reference.

This appliance must not be modified in any way - doing so is illegal and will make the appliance unsafe as well as void your warranty.

- Any repairs that need to be done to the oven must be referred to an authorized service agent only.
- DO NOT connect the appliance to multiple extension cords or multiple outlets.
- This oven must not be located immediately below a socket-outlet.
- Keep away from children.
- Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

Ensure that children do not play with this oven.

 
Close supervision is necessary when any appliance is used by or near children.

This appliance is not intended or designed for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they are supervised or given instruction concerning use of this appliance by a person responsible for their safety.

If the power supply cord is damaged, it must be replaced with a special cord or assembly by the manufacturer or its service agent. DO Not use the appliance with a damaged power supply cord.



It is unsafe to position this oven where it is close to combustible materials.

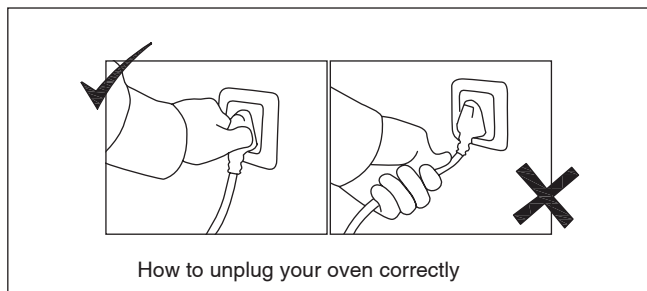

INDEX

WARRANTY	2
GENERAL INFORMATION	2
IMPORTANT SAFEGUARD	3
BEFORE USING YOUR OVEN	4
COMPONENTS	4
FUNCTIONS	5
USING YOUR OVEN	5
OVEN COOKING GUIDE	6
CARE AND CLEANING	7
TECHNICAL DATA	7
DISPOSING OF PRODUCT	7
AFTER SALES SERVICE	8

KEY



Important information



Cautions and warnings.



Danger



Contact an approved ALVA technician.



Do It Yourself

WARRANTY

PLEASE RETAIN YOUR PROOF OF PURCHASE FOR WARRANTY CLAIMS.

ALVA warrants this appliance to be free of defects in material and quality for a period of 12 months from date of original purchase. This warranty covers the intended use of this appliance – within a domestic setting and not for commercial or industrial purposes. Any damage caused by wilful abuse, tampering, modification or unauthorized repair will not be warranted.

Please retain all packaging material, as items returned without original packaging material may be subject to a withholding fee. Where this appliance is found to be defective, damaged, broken, or does not work correctly for the intended purpose, you must return the appliance to the retailer from where it was purchased. The warranty will only be effected with valid proof of purchase. Failure to provide the proof of purchase will most likely result in the repair or service required being chargeable.

If you have any questions while setting up or using this oven, please visit www.alva.co.za or call 086 100 ALVA (2582) or e-mail info@stingray.co.za

GENERAL INFORMATION

Before using this oven, please read through this manual and make sure you understand everything. If you are not sure, call **086 100 ALVA (2582)** or visit www.alva.co.za for help. This oven is a safe and efficient appliance when used according to these instructions.

Reading and understanding this manual should give you a good indication of what to expect from your Alva oven. If this product is not what you want or need, please help Alva and the environment by not damaging or destroying any part of the packaging, the manual or the Styrofoam inserts.

Always keep your proof of purchase. Keep these instructions for future use. If you lose this copy, you can obtain a new copy from your dealer or online at www.alva.co.za.

ALVA

Thank you for your purchase of this oven. Please read these instructions carefully before use and keep them in a safe place, for future reference.



Not using appliances according to the instructions is extremely dangerous and can lead to property damage, injury or death.

For household use only.

IMPORTANT SAFEGUARD

1. Do not touch hot surfaces. Use handle or knobs.
2. Always use the accessory handle or wear protective, insulated oven mitts when inserting and removing items from the hot oven.
3. The use of accessory attachments not recommended by the appliance manufacturer may cause hazard or injury.
4. Put the electric oven in a dry place. This electric oven is for household use only.
5. When operating the oven, keep at least 10cm of space on all sides of the oven to allow for adequate air circulation.
6. Do not place on or near a hot gas or electric burners, or in a heated oven or in a microwave oven.
7. Oversized foods and metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
8. Do not place any of the following materials in the oven: cardboard, plastic, paper, or anything similar.
9. Be sure to unplug the electric oven and allow cooling before moving or cleaning it.
10. Use extreme caution when removing tray or disposing of hot grease or other hot liquids.
11. Be careful not to allow the electric oven be scratched by hard edges.
12. Do not cover the air inlet of oven. Do not cover any part of the oven with metal foil. This may cause overheating of the oven.
13. Do not load any thing on door glass.
14. Do not put food tray or any other things directly on the heating elements.
15. Do not use outdoors. Do not use appliance for other than its intended use.
16. Any malfunctions should be repaired by the manufacturer or an authorized service agent



When using electric appliances, basic safety precautions should always be followed.



CAUTION

Before using your convection electrical oven for the first time, be sure to:

1. Read all instructions included in this manual.

2. Remove sticker from the oven.

3. Confirm the accessories in the carton and remove all racks and pans to wash in hot soapy water or in a dishwasher.

4. After assembling your oven, we recommend that you run it at MAX temperature for approximately 15 minutes to eliminate any packing oil that may remain after shipping.

 
BEFORE USING YOUR OVEN

1. Confirm the marked power consumption is in conformity with your household electric power.
2. Do not let cord hang over edge of table or counter to avoid that children may stumble over.
3. If the supply cord is damaged, the oven should not be used before it is repaired.
4. Oven should be sent to the manufacturer, authorised service agent or a similarly qualified person to repair in order to avoid a hazard.

This unit has a short power supply cord to reduce the risk resulting from becoming entangled in or tripping over a long cord. An extension cord may be used if you are careful in its use:

1. The electric rating of the extension cord should be at least as great as the electrical rating of the appliance.
2. An extension cord with the power cord must be arranged so that it will not drape over the counter top or table top where they can be pulled on by children or tripped over accidentally.

COMPONENTS

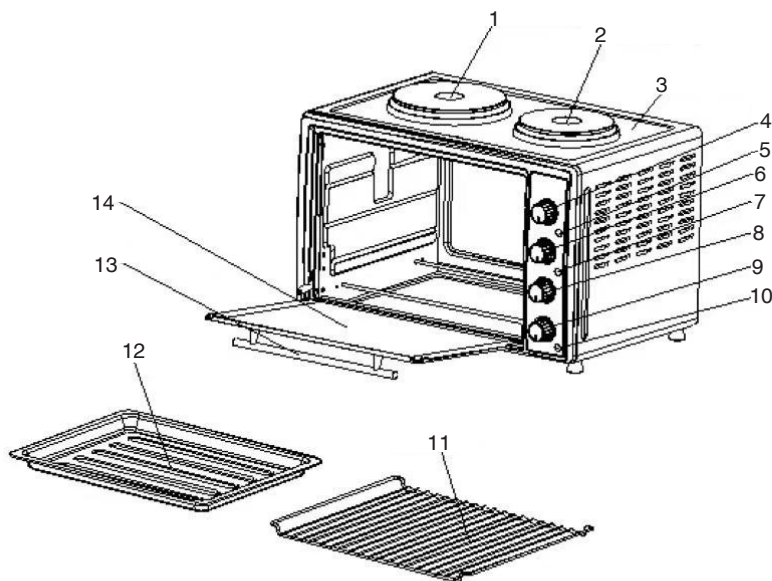

Component list:

1. Large Hotplate
2. Small Hotplate
3. Enclosure
4. Small Hotplate Knob
5. Small Hotplate Indicator
6. Big Hotplate
7. Big Hotplate Indicator
8. Oven Temperature Knob
9. Oven Function Knob
10. Oven Indicator
11. Grill Rack
12. Food Tray
13. Door Handle
14. Glass Door

FUNCTIONS

Large Hotplate (Φ185mm ~ 1200W): Used for cooking various casserole dishes and other desired use.

Small Hotplate (Φ155mm ~ 700W): Used for cooking various casserole dishes and other desired use.

Control Panel: Small Hotplate Knob, Large Hotplate Knob, Oven Temperature Knob, Oven Function Knob and Indicator Lights.

Grill Rack: For toasting, baking, and general cooking in casserole dishes and loading food tray.

Food Tray: For use in broiling and roasting various foods that contain water or will release water or oil during cooking.

Door handle: Cool handle to avoid burning of hands.

Glass Door: Transparent tempered glass allows you to conveniently view the cooking process.

USING YOUR OVEN

- A. Select cooking mode; this oven has three cooking modes and “Off” (Oven no operation)
- B. Cooking mode  (Upper Heating).
- C. Cooking mode  (Lower Heating).
- D. Cooking mode  (Combined Upper Heating & Lower Heating)

(You can only set the Oven Temperature Knob from 90°C to 230°C).

1. Place your food on the grill rack or food tray and close the oven door.
 - a. Do not use any paper or plastic containers.
 - b. Use food tray for any food that is small in size or likely to drip while cooking.
 - c. Place the food evenly on the grill rack.
2. Insert the power plug into the socket. The Function Knob must be in the OFF position.
3. Set your desired cooking temperature.
4. When your cooking function finishes, you will hear a beep, then you should:
 - a. Use accessory handle or oven mitts to remove hot food to avoid any scalding.
 - b. In the case of stopping the cooking process during cooking, make sure to turn the function knob to “OFF” position.
5. Remove the power plug from the socket after cooking.

OVEN COOKING GUIDE

1. Cooking times may vary depending on food ingredients, temperature, weight and portion size. Please adjust the time of the recipe according to the actual cooking conditions.
2. The electric oven will adjust the heating elements temperature automatically to avoid overheating.

Using Your Hotplates

Hotplates can be used to cook various casserole dishes or food and liquids in pots and pans.

Cooking Utensils

1. Enamel, cast iron and steel pots with a 155mm diameter, with smooth flat bases can be used on the hotplates.
2. Aluminum and copper cookware should not be used to heat food. Cookware diameter should not exceed the relevant hotplate.

Operation Instructions

1. Plug in the wall socket.
2. Hotplate temperature controlled by relevant control knob.
3. Small hotplate: $\Phi 155\text{mm}$
O: OFF
300W: Low heat
400W: Medium heat
700W: Maximum heat
4. Large hotplate: $\Phi 185\text{mm}$
O: OFF
400W: Low heat
800W: Medium heat
1200W: Maximum heat
5. Select the desired cooking time.
6. When completed, turn the hotplate Knob to "OFF".



NOTE: The weight of the food which is put on the Food Tray/Grill Rack cannot be more than 3.0kg. (For reference: Do not concentrate food on one side of the Food Tray/Grill Rack, it is best to spread food evenly on the Food Tray/Grill Rack).

CARE & CLEANING

Your oven features a quick-clean coating. If desired, wipe walls with damp cloth. Do not use steel wool scouring pads, abrasive cleaners or scrape with metal utensils, as this may damage the quick-clean interior.

Wash all accessories in hot soapy water or in a dishwasher. Wipe the door clean with a damp cloth and wipe dry with a paper or cloth towel.




Always unplug oven and allow to cool before cleaning.

TECHNICAL DATA

Item number	ESO002
Voltage (V) Hz	230V ~ 50Hz
Total power Output	3300W
Hotplate Output ϕ 185mm ϕ 155mm	1200W 700W
Oven Output	1400W

 DISPOSING OF PRODUCT

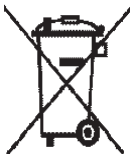

DISPOSAL:

Do not dispose of this product as unsorted municipal waste. Collection / disposal of such waste separately for special treatment is necessary.

AFTER SALES SERVICE

MANUFACTURED FOR AND DISTRIBUTED BY ALVA,
a division of Stingray Accessory Manufacturers (Pty) Ltd
P.O. Box 30014

Tokai, 7966

Tel: 021 442 1540

E-mail: info@stingray.co.za

www.alva.co.za

 www.facebook.com/AlvaGas

TOLL FREE NUMBER **086 100 ALVA (2582)**



If you do experience any faults with the unit, contact customer care at **customercare@stingray.co.za** for assistance. It is important that you do not attempt to fix the oven yourself as this will declare your warranty void.