 
PURE PLEASURE KEEPING SOUTH AFRICANS WARM FOR OVER 40 YEARS

ELECTRIC OVERBLANKET SIZE 160 x 120cm

110W







- Automatic Overheat Protection
- Machine Washable Digital Display
 - 1 year warranty



MEETS INTERNATIONAL SAFETY REQUIREMENTS



PHP006

Explanation of symbols

	Read the instructions	30	30°C extra gentle washing program
		\bigotimes	Do not bleach
	Do not insert pins	X	Do not tumble dry
		X	Do not iron
	Do not use folded or rucked	Ø	Do not dry-clean
U		Ŷ	Household only
	Not to be used by very young children (0 - 3 years)		
	CAUTION: Safety information about possible damage to appliance/accessories		
Í	NOTE: Important information.		

THANK YOU

for purchasing this electric overblanket. All our electric overblankets have been manufactured to the highest international standards. This product has been comprehensively tested for all known safety situations, so you can rest assured it will provide warmth, comfort and peace of mind.

IMPORTANT SAFETY INFORMATION

It is important to read, understand and follow these instructions. Failing to do so will shorten the life span of your overblanket and is dangerous. Retain for future use.

- Non-observance of the following notes may result in personal injury or material damage (electric shock, skin burns, fire). The following safety and hazard information is not only intended to protect your health and the health of others, it should also protect the product. For this reason, pay attention to these safety notes and include these instructions when handing over the product to others.
- This overblanket must not be used by people who are insensitive to heat, or by other vulnerable people who may not be able to react to overheating (e.g. diabetics, people with skin alterations related to illness or scarred skin, in the application area, after taking any pain-relieving medication or alcohol).
- This overblanket must not be used by very young children (0-3 years old) as they are unable to respond to overheating.
- The overblanket can be used by children older than 3 and younger than 8 years of age provided they are supervised. For this, the control must always be set to the minimum temperature
- This overblanket may be used by children over the age of 8 and by people with reduced physical, sensory or mental skills or lack of expirence or knowledge, provided that they are supervised and have been instructed on how to use the overblanket safely, and are fully aware of the consequent risks of use.
- Children must not play with the overblanket.
- Cleaning and user maintenance must not be performed by children unless supervised.
- This overblanket is not designed for use in hospitals.

- This heated overblanket is only intended for domestic/private use, not for commercial use.
- Do not insert pins.

• Do not use when folded or rucked.

- Do not use if wet and only use it in dry environments (not in bathrooms, or similar damp environments)
- This overblanket may only be used in conjunction with the controller, as specified on the label.
- The heated overblanket must only be connected to the mains voltage that is specified on the label.
- The electrical and magnetic fields emitted by this overblanket may interfere with the function of a pacemaker. However, they are still well within the limits: electrical field strength: max. 5000 V/m, magnetic field strength: max. 80 A/m, magnetic flux density: max 0.1 millitesla. Please consult your doctor and the manufacturer of your pacemaker before using this overblanket.
- Do not pull, twist or make sharp bends in the cables.
- If the cable and control are not positioned properly, there may be a risk of becoming entangled in, being strangled by, tripping
 over, or stepping on the cable and control of this heated overblanket. The user must ensure that excess lengths of cable in
 general are safely routed.
- Please check this overblanket frequently for signs of wear and tear or damage. If any such signs are evident, if the overblanket has been used incorrectly or if it no longer heats up, it must be checked by the manufacturer before being switched on again.
- Under no circumstances should you open or repair the overblanket (including the accessories) yourself, because faultless functionality can no longer be guaranteed thereafter. Failure to observe this will invalidate the warranty.
- · Do not pull, twist or make sharp bends in the cables.
- If the mains connection cable of this overblanket is damaged, it must be replaced with a new part. It is not repairable.
- Do not expose control and cables to direct sunlight.
- While the overblanket is switched on, the following conditions must be observed:
- Objects must not be placed on the overblanket (e.g. suitcase or washing basket).
- Heat sources, such as hot water bottles, heating pads or similar, must not be placed on the overblanket.
- The electronic components in the controller warm up when the overblanket is in use. For this reason, the controller must never be covered or placed on the overblanket when it is in use.
- It is essential to observe the information relating to the following chapters: Operation, Cleaning and maintenance, Storage.
- If you should have any questions about using this device, please contact Pure Pleasure 086 100 2582.

WARRANTY



This overblanket carries a one-year warranty from date of purchase (date of till slip or invoice). Always keep your till slip or invoice as a proof of purchase, without it your warranty will be void.

All electric overblankets are individually tested before leaving the factory. In the unlikely event that the overblanket becomes faulty within the first 12 months, it should be returned to Pure Pleasure to be repaired or replaced. **DO NOT RETURN THIS PRODUCT TO THE PLACE OF PURCHASE.**

If you have any questions while setting up or using this electric overblanket, please visit **www.purepleasure.co.za** or call **086 100 2582** or email **info@stingray.co.za**

To qualify for the 12-month warranty, the overblanket must be used in accordance with these instructions.

Note that by releasing the control switch from its packaging for first use, you are "permanently installing" this appliance, as specified in the Consumer Protection Act (2011).

The manufacturer or supplier will not be liable to replace goods under terms of warranty where:

- The fault has been caused or is due to misuse, negligence and/or contrary to the instructions or where the fault has been caused by power surges.
- The overblanket has been used with a voltage supply other than that indicated on the overblanket.
- The overblanket has been used for commercial purposes or non-domestic use.

FOR HOUSEHOLD USE ONLY

😤 DO NOT modify this appliance in any form whatsoever, it is extremely dangerous and will void your warranty.

ELECTRICAL REQUIREMENTS

Make sure the voltage on the sew-in label of your overblanket corresponds with the electricity supply of your residence. It must be **Alternating Current 230V ~ 50Hz**.

If you have any doubts about your electricity supply, ask your electricity supplier.

DO NOT remove the supplied plug from the appliance. Use a suitable adaptor.

This appliance does not need to be earthed. It is a double insulated product.


ITEMS INCLUDED IN THE PACKAGE

1 Electric overblanket

- 1 Controller
- 1 Instructions for use

Description

- 1. Connector
- 2. Controller
- 3. Power cord
- 4. Plug
- 5. Slider for ON/OFF
- Heat settings
- 7. Timer

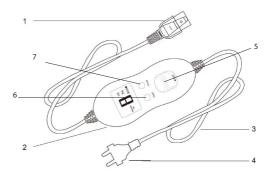



CAUTION This overblanket is only designed to warm up the human body.

OPERATION

The **Safeguard Overheat Protection System** (thermal cut-out) in the overblanket protects it from overheating by switching off **automatically** and **permanently** if it overheats or is faulty.

The safety system monitors the temperature of the electric overblanket. If the electric overblanket reaches a temperature that is considered dangerous, the system will turn off **permanently**. It cannot be reset or repaired. It is normal for the lead from the overblanket to/and including the control, to become warm. Once the safety system has activated, the overblanket will no longer work, and it cannot be reset.

🔨 No attempts should be made to repair the overblanket or have it repaired by any technician other than the manufacturer.

igwedge The control must never be tampered with or replaced.

INITIAL USE

Ensure that the overblanket does not ruck or become folded during use. This will cause the Safeguard Overheat Protection System to activate, the overblanket will no longerwork and it cannot be reset.

Remove all packaging

- · Connect the controller to the overblanket by inserting the plug into the coupler
- Plug the mains plug into the wall socket



SWITCHING ON

To switch the overblanket on, set the sliding switch for ON/OFF and temperature settings to setting 1, 2, 3, 4, 5, 6, 7, 8 or 9. The temperature settings are illuminated when switched on and default to 9, maximum heat setting.

SETTING THE TEMPERATURE

Level 1 Minimum Heat Level 2 - 8 Individual heat setting Level 9 Maximum heat

The fastest way to warm up the overblanket is to initially select the highest temperature setting.

If the overblanket is being used over several hours, we recommend that you set the lowest temperature setting on the controller to avoid the body overheating the person using the overblanket and thereby any potential burns to the skin or heatstroke.

AUTOMATIC SWITCH-OFF

- This overblanket has 3 timing settings, 1/2/10 hours.
- When switching on, the overblanket automatically sets to 2 hours switch off.
- If you want to change to 1hr or 10hrs, depress the timer button and the selected time will be displayed.



The overblanket will automatically switch off after the set time. To restart the overblanket, reset the slider to on and set the required temperature

SWITCHING-OFF

To switch the overblanket off, set the slider for OFF. The temperature settings are then no longer illuminated.

NOTE:

If the overblanket is not in use, unplug the mains plug from the wall socket. Then disconnect the controller from the overblanket by unplugging the plug-in coupling.

CLEANING AND MAINTENANCE



Examine your overblanket frequently for any signs of wear or damage to the overblanket, control or cord. In case of damage or misuse, stop using the overblanket and contact the supplier immediately.

Before cleaning, always remove the mains plug from the wall socket first. Then disconnect the controller from the overblanket by unplugging the plug-in coupling. Otherwise there is a risk of electric shock.

The controller must never come into contact with water or other liquids, as this my cause damage. To clean the controller, use a dry, lint free cloth. Do not use any chemical or abrasive cleaning agents. Small marks on the overblanket can be removed with a damp cloth and if necessary, with a little liquid detergent for delicate laundry.



The overblanket may not be chemically cleaned, wrung out, tumble dried or ironed.

This overblanket is machine-washable. Set the front loader washing machine to a particularly gentle wash cycle at 30°C (wool cycle). Use a delicate laundry detergent and measure it out according to the manufacturer's instructions.



NOTE:

NOTE

Do not wash in either a top loader or twin tub washing machine.



Please note that frequent washing of the overblanket has a negative effect on the product. The overblanket should therefore be washed in a washing machine a maximum of 5 times during its life.

Immediately after washing, reshape the overblanket to its original dimensions while it is still damp and spread it out flat on a clothes horse to dry.

Do not use pegs or similar items to attach the overblanket to the clothes horse, otherwise the overblanket may be damaged.

Do not reconnect the switch to the overblanket until the plug-in connection and the overblanket are completely dry, otherwise the overblanket may be damaged.

Never switch the overblanket on to dry it! There is a risk of electric shock.

Do not use a hairdryer or heater to dry the overblanket.

STORAGE

If you do not plan to use the overblanket for a long period of time, we recommend that you store it in the original packaging. Failing this, store in a dry place. Disconnect the controller from the overblanket by unplugging the plug-in coupling.

Please allow the overblanket to cool down before storing. Otherwise the overblanket may be damaged. Do not crease the overblanket by placing items on top of it during storage.

TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
The temperature settings are not illuminated or the digital display will not switch on while: • The controller is properly connected to the overblanket • The mains plug is connected to a working socket • The power button and the temperature button are depressed	 The safety system has switched the overblanket off permanently 	Send the overblanket and the controller for servicing.

CONTACT US

Pure Pleasure quality products are manufactured for and distributed by:

Stingray Accessory Manufacturers (Pty) Ltd PO Box 30014, Tokai, Cape Town, 7966

Tel: 086 100 2582 or 021 442 1540 | Email: info@stingray.co.za | www.purepleasure.co.za

flwww.facebook.com/stingraypp